

YFL home

BlendLab Pro 2.0

O W N E R ' S G U I D E

THANK YOU FOR PURCHASING
The BlendLab Pro 2.0



REGISTER YOUR PURCHASE

-  curaahome.com
-  +91 86554 78726
-  +91 79482 23620

RECORD THIS INFORMATION

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Online Site: _____

TECHNICAL SPECIFICATIONS

Voltage: 220V -50Hz

Power: 1200 Watts

PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.

CONTENTS

Important Safeguards 4

Getting to Know Your Blender 6

Parts..... 6

Before First Use 6

Using the Control Panel..... 7

Using the Jar 8

Blending Tips..... 10

Care & Maintenance 11

Cleaning..... 11

Storing..... 11

Resetting the Motor Thermostat 11

Troubleshooting Guide 12

Replacement Parts 13

Product Registration 13

Warranty 14

IMPORTANT SAFEGUARDS
HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

Table with 2 columns: Icon, Text. Row 1: Book icon, 'Read and review instructions for operation and use.' Row 2: Warning triangle icon, 'Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.' Row 3: House icon, 'For indoor and household use only.' Row 4: 'When using electrical appliances, basic safety precautions should always be followed, including the following:'

WARNING

To reduce the risk of fire, electric shock, serious injury, death, or damage when using this appliance, follow these basic safety precautions.

General Precautions

- 1 Read all instructions prior to using the appliance and its accessories.
- 2 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that potentially present risk to the user.
- 3 ALWAYS exercise care when handling the Blades Assembly. The blades are sharp, handle carefully. ONLY grasp the Blades Assembly by the outer perimeter of the blade assembly base. Failure to use care when handling the blade assembly will result in a risk of laceration.
- 4 Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp, loose blades that can cause injury if mishandled.
- 5 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 6 Blades are sharp. Handle carefully.
- 7 Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. NEVER unplug by grasping and pulling the flexible cord.
- 8 Before use, wash all parts that may contact food. Follow washing instructions covered in this instruction manual.

- 9 To protect against the risk of electric shock, DO NOT submerge the appliance or allow the power cord to contact any form of liquid.
- 10 DO NOT use this appliance outdoors. It is designed for indoor household use only.
- 11 This appliance has important markings on the plug blade. The attachment plug or entire cordset (if plug is molded onto cord) is not suitable for replacement. If damaged, the appliance shall be replaced.
- 12 DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
- 13 Extension cords should NOT be used with this appliance.
- 14 DO NOT allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 15 This appliance is NOT intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 16 DO NOT attempt to sharpen blades.
- 17 DO NOT allow the unit or the cord to hang over the edges of tables or counters. The cord may become snagged and pull the appliance off the work surface.
- 18 DO NOT allow any part of the unit to contact hot surfaces, including stoves and other heating appliances.

 
- 19 ALWAYS use the appliance on a dry and level surface.
- 20 NEVER place a blade assembly on the motor base without it first being attached to the cup.
- 21 Keep hands, hair, and clothing out of the container when loading and operating
- 22 ONLY use attachments and accessories that are provided with the product or are recommended by YFL home. The use of attachments not recommended or sold by YFL home may cause fire, electric shock, or injury.
- 23 During operation and handling of the appliance, avoid contact with moving parts.
- 24 DO NOT operate the appliance with an empty container.
- 25 DO NOT fill containers past the MAX FILL or MAX LIQUID lines.
- 26 DO NOT microwave any containers or accessories provided with the appliance.
- 27 DO NOT perform grinding operations.
- 28 Before operation, ensure all utensils are removed from containers. Failure to remove utensils can cause containers to shatter and potentially result in personal injury and property damage.
- 29 NEVER operate the appliance without lids and caps in place. DO NOT attempt to defeat the interlock mechanism. Ensure the container and lid are properly installed before operation.
- 30 DO NOT expose the containers and accessories to extreme temperature changes. They may experience damage.
- 31 NEVER leave the appliance unattended while in use.
- 32 DO NOT blend hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
- 33 If you find unmixed ingredients sticking to the sides of the cup, stop the appliance, remove the blade assembly, and use a scraper to dislodge ingredients.
- 34 DO NOT attempt to remove the container and lids from the power base while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lid and container.
- 35 If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 15 minutes before using again.
- 36 The maximum wattage rating for this appliance is based on the configuration of the Blades Assembly and Jar. Other configurations may draw less power or current.
- 37 To protect against risk of electrical shock, DO NOT immerse the power base in water or other liquid. Unplug the power base before cleaning.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR BLENDER

PARTS

- A 1 N Storage Lid
- B 1 N Sipper Lid
- C 1 N Short Jar 700ML
- D 1 N Tall Jar 1000ML
- E 2 N Blending Blade
- F 1 N 1200 W Power Base (attached power cord not shown)

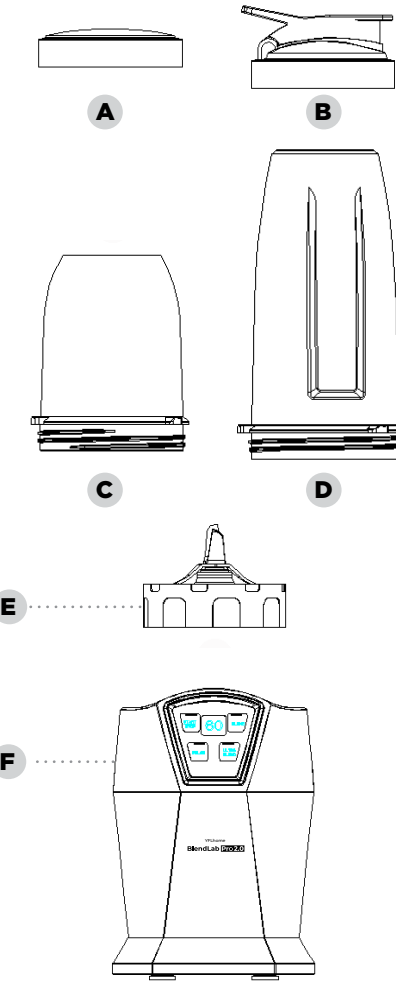

BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 4-5 before proceeding.

NOTE: Handle the Blending Blade Assembly by grasping around the perimeter of the blade assembly base.

NOTE: All attachments are BPA free. Ensure blade assembly and lid are removed from the container before washing. Exercise care when handling blade assembly.

 
- 1 Remove all packaging materials from the unit. Exercise care when unpacking blade assembly, as the blades are sharp.
- 2 Wash containers, lids, and blade assembly in warm, soapy water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assembly, as the blades are sharp.
- 3 Thoroughly rinse and air-dry all parts.

NOTE: Recommended blending time: 60 seconds per cycle. Blending for more than 60 seconds may damage the product because of the motor's high 1200-watt power.

USING THE CONTROL PANEL

PROGRAMS

Intelligent preset programs combine unique blending and pausing patterns that do the work for you. Once a preset program is selected, it will start immediately and automatically stop when blending is complete. To stop blending before the end of the program, press START/STOP or the currently active button again.

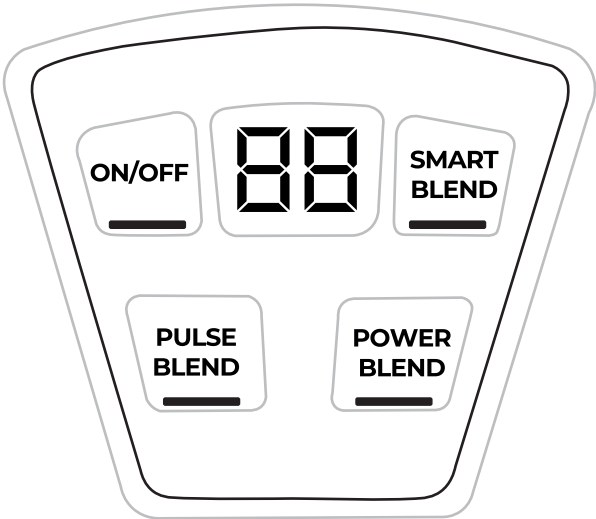

ON/OFF
Press once to start continuous running, press again to stop. Timer counts up by seconds, up to 60 seconds.

PULSE BLEND
Runs only while pressed down. Short presses make short pulses. Timer counts up by seconds as long as pressed down.

SMART BLEND
Pulses and blends fresh or softer ingredients to create consistent results. Timer counts down from 45 seconds.

POWER BLEND
Pulses and blends frozen, fibrous or hard ingredients to create smooth consistent results. Timer counts down from 60 seconds.



CAUTION
Please do not operate for more than **60 seconds continuously**. It may damage the motor.

USING THE JAR

IMPORTANT: Review all warnings on pages 4-5 before proceeding.

NOTE: **DO NOT** fill containers past the **MAX FILL** or **MAX LIQUID** lines.

 
- 1 Plug in power base and place on a clean, dry, level surface such as a countertop or table.




- 2 Add ingredients to the jar. **DO NOT** add ingredients past the **MAX LIQUID** line.




- 3 Place the Blades Assembly on the top of the cup and turn clockwise to seal.

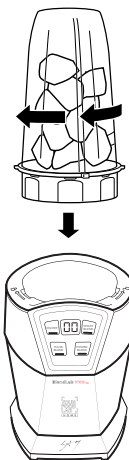

 - 4 Turn the jar upside down and install on the power base by aligning the tabs on the jar with the slots on the base. Then, rotate jar clockwise until it clicks. Once locked in place, the programs will illuminate and the unit will be ready for use.

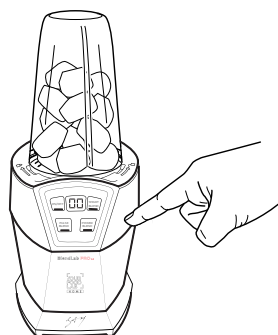

 
- 5a If using a program, select the program that best suits your desired output. The preset feature will automatically stop at the end of the program. To stop the unit at any time, press the currently active program again.
- 5b If using START/STOP, once the ingredients have reached your desired consistency, press START/STOP again, and wait for the unit to come to a complete stop.

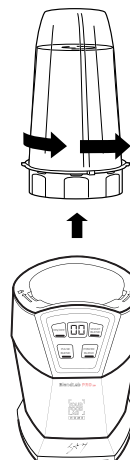

- 6 Remove the jar from the power base by turning it counterclockwise and then lifting up.



 - 7 Remove the blade assembly by twisting counterclockwise. **DO NOT** store blended contents with the blade assembly attached. Only use the Lids to cover. Exercise care when handling the blade assembly, as the blades are sharp.

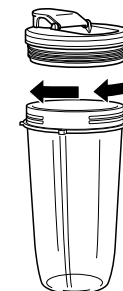

- 8 To enjoy on the go, place the Sipper Lid onto the jar and twist lid clockwise until firmly sealed.



- 9 Unplug the unit when finished. Refer to the Care & Maintenance section for cleaning and storage instructions.

NOTE: Dry grinding in Tritan/PC jar generates heat due to friction, raising the overall temperature - and thus, resulting in a foggy appearance. However, the jar will still remain fit for usage as it doesn't change the composition of the jar material. Please reach out to our customer care team for more details.



CAUTION

Please do not operate for more than **60 seconds continuously**. It may damage the motor.

 
BLENDING TIPS

- 1 Do not run the product without any ingredients in the container for a long time. It may cause the product damage and/or shorten product life.
- 2 Use on a dry and flat surface. Do not move or shake the blender while it is operating.
- 3 Only put food ingredients. Do not put spoon, fork, spatula, etc in to the container.
- 4 Do not shake or move while operating (It might cause safety accidents or shortening of lifespan).
- 5 For grinding dry ingredients such as grains and coffee beans, make sure to completely dry the ingredients and wipe off any moisture in the Grinding Jar. If ingredients are wet, the blade will not process ingredient efficiently.

- 6 For best Results,
Cut ingredients below 1-3cm before putting them in the Container.
 - Use ice cubes made at home.
 - Follow the loading guide:
Liquid (milk, water, etc.) →
Wet ingredients (tomatoes, fruits, etc.) →
Soft ingredients (leafy vegetables) →
Hard ingredients (carrots, ice, etc.) →
- 7 This blender is equipped with motor overheating protection. If the motor stops due to overheating protection, allow the blender to cool for at least 30 minutes before beginning another cycle.

Recommended Ice

Use home made ice cubes no larger than 3cm

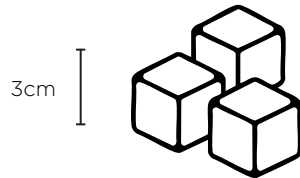

CARE & MAINTENANCE

CLEANING

Hand-Washing

Wash containers, lids, and blade assembly in warm, soapy water. Use a dishwashing utensil with handle to avoid direct contact with the blades. Exercise care when handling the blade assembly as the blades are sharp. Thoroughly rinse and air-dry all parts.

Power Base

Unplug the unit before cleaning. Wipe motor base with a clean, damp cloth.

STORING

Wrap the power cord around the cord wrap on the underside of the motor base. Store the unit upright and with the blade assembly attached to the cup.

DO NOT store blended or unblended ingredients in the cup with the blade assembly attached. Use only the sipper lid when storing blended or unblended ingredients in the containers.

DO NOT stack items on top of the containers. Store any remaining attachments alongside the unit or in a cabinet where they will not be damaged or create a hazard.

RESETTING THE MOTOR THERMOSTAT

This unit features a unique safety system that prevents damage to the motor and drive system should you inadvertently overload it. If the unit is overloaded, the motor will be temporarily disabled. Should this occur, follow the reset procedure below.

- 1 Unplug the unit from the electrical outlet.
- 2 Allow the unit to cool for approximately 15 minutes.
- 3 Remove the blade assembly from the container. Empty the container and ensure no ingredients are jamming the blade assembly.

IMPORTANT: Ensure that maximum capacities are not exceeded. This is the most typical cause of appliance overload.

Storage:

Always keep the blades wrapped in or inside the Bowl, with the bowl connection cover locked to avoid contact.

Recycling:



Dispose of the device in an environmentally friendly manner. It should not be disposed of in the normal domestic waste. Dispose of it at a recycling centre for used electrical and electronic devices.



CAUTION
Please do not operate for more than **60 seconds continuously**. It may damage the motor.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, unplug unit before troubleshooting.

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Motor doesn't start or attachment doesn't rotate.	For the jars, make sure that the tabs are seated in the slots and turned clockwise.
Food is unevenly chopped.	Either you are chopping too much food at once, or you are not pulsing properly. Reduce the amount of food in the jar.
Food is too finely chopped or too watery.	The food has been over processed. Use short operating times for the best results.
You can not achieve snow from ice cubes.	For the best results, use ice straight from the freezer. Try using short operating times instead of long ones. Make sure the jar is completely dry before adding ice.
Jar is leaking	Make sure that your lid or blade assembly is properly assembled to the jar. Leaking may occur if it is misaligned when twisted onto the jar. Turn the lid tightly clockwise.
Unit doesn't turn on	Make sure the unit is plugged in. Make sure the blade assembly is properly assembled to the jar and that is not misaligned.
Unit doesn't turn off	Unplug the power cord from the electrical outlet and call customer service for support.
Doesn't mix well	Pulse ingredients for best results. Press down on the jar in short intervals for even blending and chopping. For frozen ingredients, pulse in short intervals of 2-5 seconds and repeat.
Lid/blade assembly will not properly align to the jar	Set the jar on a level surface. Place the lid or blade assembly on top of the jar and align the threads so that the lid/blades sit flat on the jar. Twist clockwise so that the lid/blades evenly align to the jar until you have a tight seal.

REPLACEMENT PARTS

To order additional parts and attachments, visit curaahome.com

PRODUCT REGISTRATION

Please log onto curaahome.com and complete the online warranty form with your personal and product details within 14 days.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

curaahome.com	15
---------------	----

For recipes follow this QR



@yfilhome

Sevenschef Consumers Home & Kitchen Private Ltd.

☎ **+91 86554 78726** 📞 **+91 79482 23620**

🌐 **www.curaahome.com**

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.