

cüraa

AroMix

O W N E R ' S G U I D E

Elevating Life



SCAN THE QR CODE TO
REGISTER YOUR PURCHASE

-  curaahome.com
-  +91 86554 78726
-  +91 79482 23620

RECORD THIS INFORMATION

Serial Number: _____
Date of Purchase: _____
(Keep receipt)
Online Site: _____

TECHNICAL SPECIFICATIONS

Model Name: AroMix
Model No.: AHG300
Voltage: 230V~, 50 Hz
Rating Wattage: 300W
Protection Against Electric Shock: Type II

PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.

CONTENTS

Important Safeguards	4
Getting to Know Your AroMix	6
Parts.....	6
How to Operate your AroMix	7
Before First Use	7
Operating Instructions.....	7
How to Use	8
Quick Guide to Processing Ingredients	9
DO's & DON'Ts	9
Care & Maintenance	10
Troubleshooting Guide	11
Replacement Parts	12
Product Registration	12
Warranty	13

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

To reduce the risk of fire, electric shock, serious injury, death, or damage when using this appliance, follow these basic safety precautions.

General Precautions

⚠ CAUTION

 
To avoid risk of electric shock, never immerse the cord, plug, or power base blender in water or other liquids.

- 1 This appliance is for domestic use only and **should not be used for commercial purposes.**
- 2 The use of attachments not recommended or sold by the manufacture may cause fire, electric shock, or injury.
- 3 Unplug the appliance when it is not use. Make sure the appliance is unplugged before assembling, disassembling, adding additional parts, and cleaning.
- 4 **DO NOT** pull, twist, or mistreat the power cord.
- 5 **DO NOT** allow cord to hang over the side of the counter or table.
- 6 **DO NOT** allow cord to touch hot surfaces, including stove.
- 7 Periodically inspect cord and plug for damage. **DO NOT** operate any appliance with a damaged cord or plug. If the appliance malfunctions, or is dropped or damaged in any manner, discontinue use. Contact customer service for assistance in obtaining a replacement.
- 8 **AVOID** contact with moving parts.

- 9 Keep hands and utensils away from the cutting blade while grinding of spices & ingredients to reduce the risk of severe personal injury or damage to the device.
- 10 **NEVER** leave the appliance unattended while it is in use.
- 11 Close supervision is necessary when any appliance is used by or near children.
- 12 **DO NOT** use the appliance outdoors if exposed to inclement weather elements such as rain or in wet conditions.
- 13 Blades are sharp. Handle carefully.
- 14 Check gasket in Jar Lid to make sure it is completely seated in unit before each use.
- 15 The appliance is not intended for use in the microwave. **DO NOT** place the cup, containers, Power Base or accessories in the microwave as this may result in damage to the appliance.
- 16 To reduce the risk of personal injury or damaged to the device, keep hands and utensils away from the cutting blade.
- 17 **DO NOT** blend the hot Ingredients in the jar.
- 18 **DO NOT** run the appliance when the containers are empty.
- 19 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- 20 Be careful if hot liquid is poured into the AroMix, it can be ejected out of the appliance due to a sudden steaming.
- 21 **SWITCH OFF** the appliance and disconnect from power supply before changing accessories or approaching parts that move in use.
- 22 This appliance is intended to be used in household and similar applications.

SAVE THESE INSTRUCTIONS

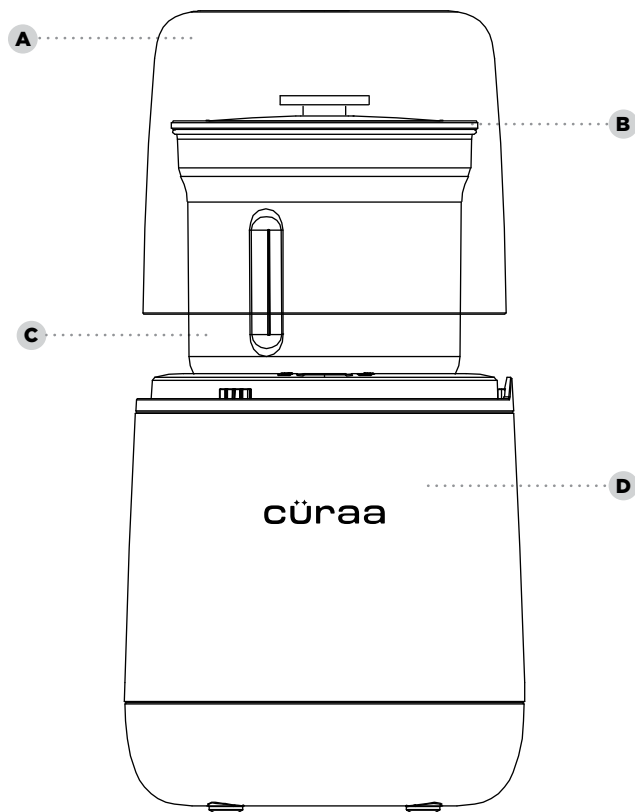

PARTS

- A** Activation Lid
- B** Jar Lid
- C** Grind Jar with 2 Leaf Stainless Steel Blades
- D** Grinder Base

Images Just for Reference Only

BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 4-5 before proceeding.

NOTE: Remove all packaging materials and any promotional labels or stickers from the AroMix Grinder.

NOTE: Clean each part thoroughly, the removable parts should be washed by hand in warm water. The motor base can be cleaned with a Clean Soft damp cloth.

DO NOT PUT IN A DISHWASHER.

- 1** Before use, check all accessories are complete and that the equipment is not damaged.
- 2** The AroMix should be run through an operational cycle before it is used for the first time. When using the AroMix for the first time a slight odour may be emitted. This is normal and will soon subside.

OPERATING INSTRUCTIONS

- 1** Plug the unit into a proper power socket at 230V- 50Hz.
- 2** Do not run the unit continuously for longer than 30 seconds at a time. Give it at least 1 minute's break before using again.
- 3** Always make sure the appliance is completely assembled before operating, because of its built-in safety system the appliance will not operate unless properly assembled. Always make sure the jar has been locked in the slot before operating.

⚠ CAUTION

This is not intended for use by persons [including children] with reduced physical, sensory or mental capabilities. Or by those with lack of experience and knowledge; unless they are under supervision or have been given instructions concerning use of the appliance by a person responsible for their safety. Children should always use this under strict supervision.

HOW TO USE

- 1 Fill the stainless steel grinding jar with desired ingredients. Please refer to the grinding suggestions for maximum capacities.
- 2 Place the grinding jar on the grinder base and turn clockwise into the locking position.
- 3 Place the activation lid over the grinding bowl and onto the grinder base.
- 4 Plug the supply cord into the mains power supply.
- 5 Push the lid down and hold to begin grinding. Grind to the desired consistency by maintaining pressure on the lid.
- 6 To stop grinding release pressure from the lid.
- 7 Unplug the grinder from the mains power supply.
- 8 Remove the grinding jar by turning in an anti-clockwise direction. Unused spices can be stored in the grinding bowl using the storage lid.

NOTE: Maximum capacity for spices is 90 grams (for some spices, not for all). Maximum capacity for nuts is 75 grams (any nuts larger than a peanut e.g. cashew, almond or walnut - maximum capacity 45 grams).

NOTE: Do not over fill the Spice & Nut Grinder.

NOTE: Do not continuously grind more than 4 cycle in succession (for all spices and all nuts).

NOTE: If using the grinder for coffee beans, ensure the jar is properly cleaned and completely dry before use. It is recommended to use a separate jar exclusively for coffee grinding to avoid cross-contamination of flavours/aroma.

OPERATION

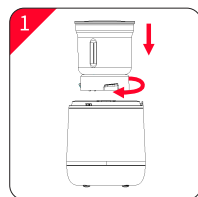 


Fig. 1

Place the grinding jar on the base, rotate it clockwise, And lock the grinding jar

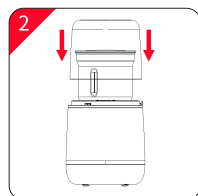 


Fig. 2

Pour in the ingredients, cover and press the transparent jar lid of the grinding jar tightly, and then buckle the activation lid on the machine.

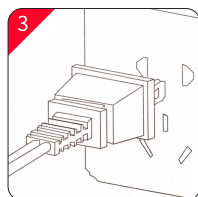 


Fig. 3

Turn on the power supply (ensure that the voltage indicated on the product is consistent with the local voltage).

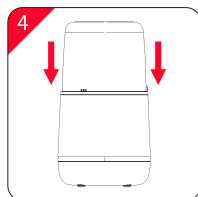 


Fig. 4

Press the activation lid (switch button), the AroMix starts to work, and release the activation lid to stop the AroMix.

QUICK GUIDE TO PROCESSING INGREDIENTS

The grinder is designed for dry spices, nuts, seeds, coffee beans and more. The list is endless - but here's a taste of what ingredients this product is great for and our suggested grinding times:

Food	Weight	Work Time	Rest Time	Remark
Coffee beans	75g	20s	≥1m	Suitable for coffee grinding
Spices	20g	30s	≥1m	Grind in small batches for better consistency
Nuts	30g	25s	≥1m	-
Sesame Seeds	30g	25s	≥1m	
Nigella Seeds (Kalonji)	30g	30s	≥1m	Recommended for dry grinding only
Rock salt	40g	30s	≥1m	Break rock salt into small pieces before grinding

DO'S & DON'TS

DO'S	DON'TS
Read the manual before first use	Don't run continuously for more than 30-60 seconds
Use correct method: spices → pulse, coffee → short continuous runs	Don't overfill the jar
Ensure jar lid & jar are properly locked	Don't use without jar lid & jar locked properly
Grind in small batches for better results	Don't grind wet ingredients
Allow cooling time between uses	Don't use when overheated
Clean after every use to avoid smell mixing	Don't leave old powder inside
Use separate bowl for coffee (if possible)	Don't mix coffee & spices in same bowl
Follow recommended quantity limits	Don't grind very hard or large items directly
Handle blades carefully and unplug before cleaning	Don't touch blades when plugged in
Clean motor base with dry/damp cloth only	Don't immerse motor base in water

Images Just for Reference Only

CARE & MAINTAINANCE

Cleaning:

- 1 ALWAYS** unplug the power cord before cleaning the attachment or wiping the main unit with a damp cloth to prevent electric shock.
- 2** Clean the main unit with a damp cloth only. **DO NOT** rinse it with water.
- 3 DO NOT** place the product in an automatic dishwasher.
- 4** After cleaning, dry all components thoroughly before reassembling and using the product again.
- 5** Slight discoloration may occur depending on usage conditions.
- 6** To protect the motor from moisture, use the machine regularly or store it in a dry, well-ventilated place.

Storage:

Always keep the blades wrapped in or inside the Bowl, with the bowl connection cover locked to avoid contact.

Recycling:



Dispose of the device in an environmentally friendly manner. It should not be disposed of in the normal domestic waste. Dispose of it at a recycling centre for used electrical and electronic devices.

TROUBLESHOOTING GUIDE

If the device stops working properly, first check whether you are capable of troubleshooting the problem. If you can not, contact customer service.

PROBLEMS	POSSIBLE CAUSE	SOLUTIONS
Grinder not starting	Plug not connected / lid not fitted properly	Plug it in properly and press the lid firmly
Machine runs but not grinding	Too much material / pieces too big	Put less material and cut into smaller pieces
Grinding not even	Overfilled / holding too long	Grind in small amounts and use short presses
Burning smell	Used for too long	Stop and let it cool for 10–15 minutes
Grinder stopped suddenly	Overheating	Switch off and let it cool before using again
Loud noise	Bowl not fixed / hard object inside	Fix bowl tightly and check contents

REPLACEMENT PARTS

To order additional parts and attachments, visit curaahome.com

PRODUCT REGISTRATION

Please log onto curaahome.com and complete the online warranty form with your personal and product details within 14 days.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

cüraa | AroMix

ONE (1) YEAR LIMITED WARRANTY

Dear Customer,

Thank you for choosing a **Cüraa** consumer product.

All Cüraa home products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Cüraa, we believe in providing not only service, but adding value to your kitchen. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

This Cüraa consumer product is covered against manufacturing defects from the date of purchase. The warranty is not transferable move it up as there is space.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in Cüraa's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date. In case of repairs or replacement of any part(s) of the product, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (Activation Lid, Jar Lid etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at curaahome.com.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by Cüraa. These defects include damages caused in the process of shipping, altering, or repairing the Cüraa product or any of its parts when the repair is performed by a repair person not authorized by Cüraa.
6. Products purchased, used, or operated outside India.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit curaahome.com for product care and maintenance self-help.

Our Customer Service

Specialists are also available at

Email: support@curaahome.com

Phone: +91 86554 78726, WhatsApp: +9179482 23620

to assist with product support and warranty service options.

To make a warranty claim, you must provide proof of purchase.

For recipes follow this QR



@yfilhome

Sevenchef Consumers Home & Kitchen Private Ltd.

☎ **+91 86554 78726** 📞 **+91 79482 23620**

🌐 **www.curaahome.com**

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.