

cüraa

Blender

O W N E R ' S G U I D E

by YFL home

THANK YOU FOR PURCHASING



SCAN THE QR CODE TO
REGISTER YOUR PURCHASE

 curaahome.com

 +91 86554 78726

 +91 79482 23620

RECORD THIS INFORMATION

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Online Site: _____

TECHNICAL SPECIFICATIONS

Voltage: 230 V
Frequency: 50 Hz
Power: 400W
Motor: Copper Motor
Model No.: NB400

PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.

CONTENTS

Important Safeguards 4

Getting to Know Your Blender..... 6
Parts..... 6

How to Operate your Blender..... 7
Before First Use 7
Operating Instructions..... 7

Using the Jars 8

Recipes 10

Care & Maintenance 11

DO'S & DON'TS 12

Troubleshooting Guide 13

Model Specifications 14

Replacement Parts 14

Product Registration 14

Warranty 15

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

WARNING

To reduce the risk of fire, electric shock, serious injury, death, or damage when using this appliance, follow these basic safety precautions.

General Precautions

- 1 Read all instructions prior to using the appliance and its accessories.
- 2 Carefully observe and follow all warnings and instructions. This unit contains electrical connections and moving parts that may potentially present risk if mishandled.
- 3 **ALWAYS** exercise care when handling the Blades Lid. The blades are sharp, handle carefully. **ONLY** grasp the Blades Lid by the outer perimeter of the blade assembly base. Failure to use care when handling the blade lid will result in a risk of laceration.
- 4 Take your time and exercise care during unpacking and appliance setup. This appliance contains sharp blades that can cause injury if mishandled.
- 5 Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance.
- 6 Blades are sharp. Handle carefully.
- 7 Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug by the body and pull from the outlet. **NEVER** unplug by grasping and pulling the flexible cord.
- 8 Before use, wash all parts that may contact food. Follow washing instructions.
- 9 To protect against the risk of electric shock, **DO NOT** submerge the appliance or allow the power cord to contact any form of liquid.
- 10 **DO NOT** use this appliance outdoors. It is designed for indoor household use only.
- 11 This appliance has important markings on the plug & cord. The attachment plug or entire cordset (if plug is molded onto cord) is not suitable for replacement. If damaged, the appliance shall be replaced.
- 12 **DO NOT** operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
- 13 Extension cords should **NOT** be used with this appliance.
- 14 **DO NOT** allow children to operate this appliance or use as a toy. Close supervision is necessary when any appliance is used near children.
- 15 This appliance is **NOT** intended to be used by people with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 16 **DO NOT** attempt to sharpen blades.
- 17 **DO NOT** allow the unit or the cord to hang over the edges of tables or counters.
- 18 **DO NOT** allow any part of the unit to contact hot surfaces, including stoves and other heating appliances.
- 19 **ALWAYS** use the appliance on a dry and flat surface.
- 20 **NEVER** place a blade assembly on the motor base without it first being attached to the jar.
- 21 Keep hands, hair, and clothing out of the jar when loading and operating.
- 22 **ONLY** use attachments and accessories that are provided with the product or are recommended by Cūraa. The use of attachments not recommended or sold by Cūraa may cause fire, electric shock, or injury.
- 23 During operation and handling of the appliance, avoid contact with moving parts.
- 24 **DO NOT** operate the appliance with an empty jar.
- 25 **DO NOT** fill jars past the **MAX** lines.
- 26 **DO NOT** microwave any jar or accessories provided with the appliance.
- 27 **ONLY** perform grinding operation in stainless steel jar with grinding blade lid (2 leaf).
- 28 Before operation, ensure all utensils are removed from jars. Failure to remove utensils can cause jars to shatter and potentially result in personal injury and property damage.
- 29 **NEVER** operate the appliance without lids and caps in place. **DO NOT** attempt to defeat the interlock mechanism. Ensure the jar and lid are properly installed before operation.
- 30 **DO NOT** expose the jars and accessories to extreme temperature changes. They may experience damage.
- 31 **NEVER** leave the appliance unattended while in use.
- 32 **DO NOT** blend hot liquids. Doing so may result in pressure buildup and steam exposure that can pose a risk of the user being burned.
- 33 If you find unmixed ingredients sticking to the sides of the jar, stop the appliance, remove the blade assembly, and use a scraper to dislodge ingredients.
- 34 **DO NOT** attempt to remove the jar and lids from the powerbase while the blade assembly is still spinning. Allow the appliance to come to a complete stop before removing lid and jar.
- 35 If the appliance overheats, a thermal switch will activate and temporarily disable the motor. To reset, unplug the appliance and allow it to cool for approximately 15 minutes before using again.
- 36 The maximum wattage rating for this appliance is based on the configuration of the Blades Assembly and Jar. Other configurations may draw less power or current.
- 37 To protect against risk of electrical shock, **DO NOT** immerse the power base in water or other liquid. Unplug the power base before cleaning.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR BLENDER

PARTS

- A** 1 x Storage Lid
- B** 1 x Sipper Lid
- C** 1 x Short Transparent Jar 300ML (comes only with BlendLab)
- D** 1 x Steel Jar 300ML
- E** 1 x Grinding Blade
- F** 1 x Blending Blade
- G** 1 x Tall Transparent Jar 700ML
- H** 1 x 400 W Power Base (attached power cord not shown)

I 1 x Blending Jar 1200ML

J 1 x Chopper

Optional accessories that come with the blender may vary based on your purchase.

You can buy additional accessories separately on curaahome.com.

Speed	RPM
Pulse Mode (P)	18000 RPM
1st Speed (1)	18600 RPM
2nd Speed (2)	22000 RPM

Jar Capacity		
Jar	Size	Max Capacity
Tall	700mL	500mL
Short	300mL	230mL
Stainless Steel	300ML	210mL

Switch Knob: Rotary Switch with Pulse, 1st & 2nd Speed modes


Rating: 30 Second (ON time-30 seconds, OFF time-60 seconds)

Material of body: ABS body

Compatible Jars: Transparent jars (300mL & 700mL) & Stainless Steel jar 300 mL

Power cord: 2 pin 2 core With PVC Plug

Country of origin: India

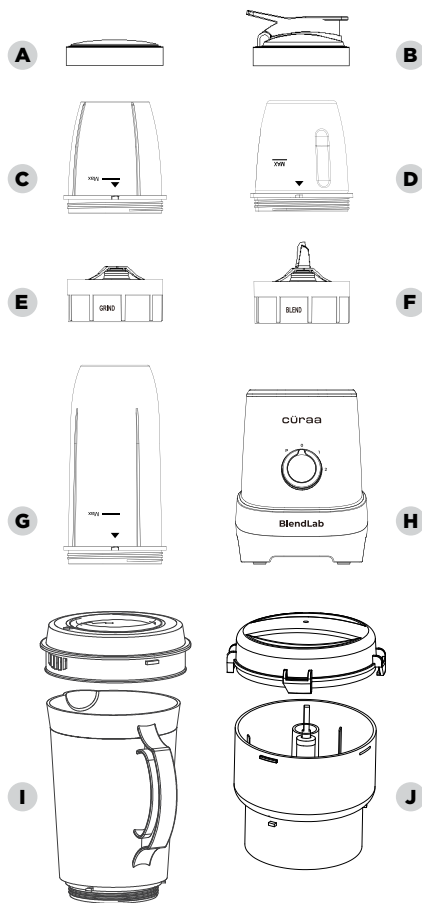

Images Just for Reference Only

HOW TO OPERATE YOUR BLENDER

BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 4-5 before proceeding.

NOTE: Handle the Blade Assembly by grasping around the perimeter of the blade assembly base.

NOTE: All Attachments are Food Grade. Ensure blade assembly and lid are removed from the jar before cleaning.

- 1** Remove all packaging materials from the unit. Exercise care when unpacking blade assembly, as the blades are sharp.
- 2** Wash jars, lids, and blade assembly with normal, soapy water using a dishwashing utensil with a handle to avoid direct contact with the blades. Exercise care when handling blade assembly, as the blades are sharp.
- 3** Thoroughly rinse and air-dry all parts.

OPERATING INSTRUCTIONS

- 1** Plug the unit into a proper power socket at 230V- 50Hz.
- 2** Do not run the unit continuously for longer than 30 Seconds at a time. Give it at least 60 second's break before using again.
- 3** Please ensure that the ▼ (arrows) on the body and jar are properly aligned at the centre, indicating that the product is securely locked.
- 4** Always make sure the appliance is completely assembled before operating, because of its built-in safety system the appliance will not operate unless properly assembled. Always make sure the jar has been locked in the slot before operating.

⚠ CAUTION

This is not intended for use by persons [including children] with reduced physical, sensory or mental capabilities. Or by those with lack of experience and knowledge; unless they are under supervision or have been given instructions concerning use of the appliance by a person responsible for their safety. Children should always use this under strict supervision.

USING THE JARS

IMPORTANT: Review all warnings on pages 4-5 before proceeding.

The Blend lab can be used for blending or grinding. You can use the unit with different modes as below:

Grinding:

Use only stainless steel jar & 2 leaf grinding blades for better grinding results.

- Put the prepared ingredients (e.g. coffee bean, soya bean, rock sugar, sesame, dry coriander, cumin seed, black pepper, garam masala etc.) into the Stainless-steel jar only (Fig 1).
- Cover & screw the Stainless-steel Jar with the Grinding Blade (2-Leaf) lid for grinding (Fig. 1).
- Put the Jar onto the power base. Make sure the Locking pins of the Jar are in correct position on three grooves of the motor unit. (Fig. 2).
- Push down the Jar and turn it clockwise to lock into the motor unit (Fig. 3).
- There are (arrows) marked on the jar & body of the motor unit. Please make sure they are in one straight line for the locking to be secure.
- Turn on the blender and give two-three inches on pulse mode for 2-2 seconds each. Then 15 seconds on 1st speed & 30 seconds on 2nd speed for a cycle.
- Make sure you give rest for 1 minute after every cycle, also make sure you open the blade lid & jar after every cycle to release the hot air trapped.
- When the grinding is finished, turn the Jar anti-clockwise to unlock from the motor unit (Fig. 4).

- Take out the Jar/contents and unscrew the Blade lid. Pour the ingredient into a container and it is ready for use or you can cover the Jar with the Storage Lid to use as needed.

 


Fig. 1

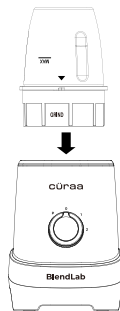 


Fig. 2



Fig. 3
(Locking Direction)

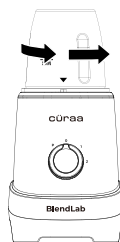 


Fig. 4
(Unlocking Direction)

Images Just for Reference Only

Smoothie & Blending & Chutney:

Use Transparent 700 ml & 300 mL Jars for blending chutneys, Purries Smoothies & milshakes, etc.

- Put the prepared Ingredients for blending smoothies & chutney in the Transparent jar.
- Always add some amount of liquid/water according to recipe before blending.
- Cover & screw the blending Jar with the blending blade (4 Leaf) lid for blending (Fig. 5).
- Put the Jar onto the motor unit. Make sure the Locking pins of the Jar are in correct position on three grooves of the motor unit. (Fig. 6).
- Push down the Jar and turn it clockwise to lock into the motor unit (Fig. 7).
- There are (arrows) marked on the jar & body of the motor unit. Please make sure they are in one straight line for the locking to be secure.
- Turn on the blender and give two-three inches on pulse mode for 2-2 seconds each. Then 15 seconds on 1st speed & 30 seconds on 2nd speed for a cycle.
- Make sure you give rest for 1 minute after every cycle, also make sure you open the blade lid & jar after every cycle to release the air trapped.
- When the blending is completed, turn the Jar anti-clockwise to unlock from the motor unit (Fig. 8).
- Take out the Jar/contents and open the Blade Lid. Pour the blended juice/smoothie into a container and it's ready for serve or you can cover the Jar with the Storage lid. Keep in the refrigerator for serving later later or carry it on the go.

CAUTION

Please make sure you use proper blade lids for Grinding(2-Leaf Blade Lid) & Blending(4-leaf Blade Lid) for optimum performance of grinding/blending of the ingredients.

 


Fig. 5

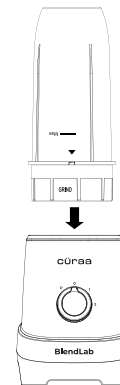 


Fig. 6

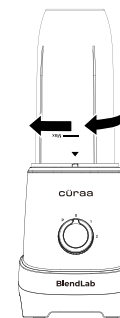 


Fig. 7
(Locking Direction)

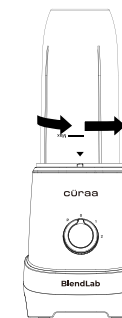 


Fig. 8

(Unlocking Direction)

Images Just for Reference Only

RECIPES

Grinding : 2-Leaf Blade lid with Small stainless Steel jar for dry Grinding

Recipes	Ingredients Quantity	Time
Garam Masala	60g of assorted spices roasted & cooled	1 min
Dhania Powder	60g of dry Dhania roasted & cooled	1 min
Red Chilli Powder	50g of red chilli roasted & cooled	1 min
Rock Sugar powder	50g rock sugar	1 min
Cumin Seeds Powder	60g of dry cumin seeds roasted & cooled	1 min

Smoothie & Blending : 4-Leaf blade lid with 700ml big Jar for Blending & Smoothie & small jar for chutneys & Paste.

Recipes	Ingredients Quantity	Time
Orange-Pineapple - Sweet lime Smoothies	Orange - 1/2 med + Sweet lime - 1/2 med + Pineapple - 2 slices + Little water - Add to taste	40 secs
Musk Melon - Papaya Shot	Musk melon - 2 wedges + Papaya - 1/2 cup chopped + Little water + Salt - add to taste	40 secs
Apple - Anar Shot	Apple - 1 small + Pomegranate - 1/2 cup + Little water + Salt - add to taste	40 secs
Tomato - Beetroot Shot	Tomato - 1 small + Beetroot - 5 med pcs + Little water + Salt & lime add to taste	40 secs
Coriander Greens - Mint Shot	Coriander leaves - 1/2 bunch + Mint leaves - 20 + Little water + Cumin Powder & Salt - add to taste	40 secs
Melon Mast	Watermelon - 5 slices + Muskmelon - 3 slices + Skimmed milk powder - 2 tsp + Ice cubes - few	40 secs
Apple Smoothie	Apple - 1 large ripe + Honey - 2 tsp + Fresh cream - 1 tsp + Cow's Milk - 1/2 cup	40 secs
Strawberry Smoothie	Fresh Yoghurt - 1 cup + Honey - 2 tsp + Fresh Cream - 2 tsp + Strawberries - 5-6 nos ripe	40 secs
Ginger Garlic paste	25g ginger + 25g garlic	1 min
Green Chutney	Green Coriander Leaves - 1/4 bunch + Ginger - 5g + Green Chilli - 1 + Mint Leaves - 10 + Salt - to taste	1 min

CARE & MAINTENANCE

Unplug the unit before cleaning.

Take off all the jars & accessories and clean under the running water (Fig. 9). Rinse and dry.

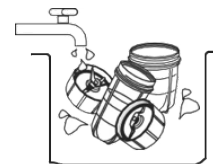


Fig. 9

Do not immerse the motor unit and power cord set into water (Fig. 10).

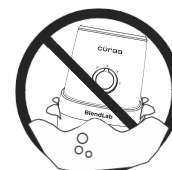


Fig. 10

Clean the motor unit with a damp cloth and wipe it dry immediately. (Fig. 11).



Fig. 11

Always store the jar upside down blade lid on the top of the jar.(Fig. 12)

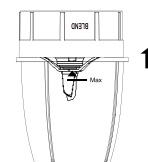


Fig. 12

NOTE:

- Do not tamper or remove the silicon ring in the Jar Base while cleaning.
- Do not immerse the motor unit and power cord set into water.
- The Blades are sharp. Handle with care and patience.
- Make sure the blades are thoroughly dry after each cleaning in order to avoid rusting.
- Cleaning is required after each operation.

Storage:

Always keep the blades wrapped in or inside the Bowl, with the bowl connection cover locked to avoid contact.

Recycling:



Dispose of the device in an environmentally friendly manner. It should not be disposed of in the normal domestic waste. Dispose of it at a recycling centre for used electrical and electronic devices.

Images Just for Reference Only

DO'S & DON'TS

DO'S	DON'TS
Read the Manual: Always go through the user manual provided with the blender for specific instructions and safety guidelines.	Don't Run Continuously: Avoid running the blender for more than 30 seconds continuously — it may overheat.
Use in Short Bursts: Operate in 30 second intervals with breaks to avoid overheating the motor.	Don't Use Hot Ingredients: Avoid blending hot liquids or food, as the pressure can cause damage to machine & user.
Add Enough Liquid: For smoother blending (especially smoothies or purees), add a bit of liquid like water, milk, or juice.	Don't Overfill the max line: Leave space at the top of the jar to avoid spills or pressure build-up.
Secure the Lid: Ensure the jar is tightly sealed and properly fixed to the base before starting.	Don't Force the Lid: If the jar doesn't lock easily, don't force it — check alignment instead.
Cut Ingredients: Chop large fruits or vegetables into smaller pieces to ease the blending process.	Don't Use hard Ingredients: Avoid ice cubes more than 2 cm, bones, or very hard nuts unless the blender is specifically rated for it.
Hold It Steady: Hold the blender while in use to prevent it from vibrating or tipping.	Don't Immerse the Motor Base in Water: Clean the base with a damp cloth; do not submerge it.
Clean Immediately After Use: Rinse or wash the jars and blades right after use to prevent food from drying and sticking.	Don't Use Abrasive Cleaners: These can scratch or damage the jars and blades.
Use Designated Jars: Use only the jars and blades provided with the blender (e.g., for wet or dry grinding).	Don't Operate with an Empty Jar: Always have some contents inside — running it dry can damage the blender and it's attachments.


TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, unplug unit before troubleshooting.

PROBLEMS	POSSIBLE CAUSE	SOLUTIONS
Blender doesn't start	Power supply issue	Ensure the blender is plugged in and the power switch is on.
	Safety interlock not engaged	Check if the container is properly attached and the lid is securely locked
	Overload protection triggered	If overloaded, unplug, wait a few minutes, and reduce the amount of ingredients before restarting.
Blender makes strange noises	Dull blades	Inspect and clean the blades and jar.
	Food blockage	Remove any food particles stuck under the blades or around the jar base.
Blender leaks	Faulty gasket	Replace the rubber gasket if worn or damaged.
	Cracked jar	Inspect the jar for cracks or chips and replace if necessary.
	Overfilling	Do not exceed the maximum fill line indicated on the jar.
Burning smell during first use	Normal due to varnish coating on motor	This is typical and will stop after a few usage cycles.
Overheating	Continuous operation beyond recommended time	Do not run the appliance beyond 30 seconds. Allow it to cool down for at least 1 minute before using again.

MODEL SPECIFICATIONS

This product is available in following specifications (optional accessories also sold separately)

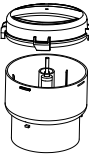Feature	BlendLab ☐	Optional Accessories
Power Output	400 Watt	 Blender Jar ☐
Blending Speeds	2 Manual Speeds + Pulse Option	
Blade Type	2 Blade Lids: 1 x Grind Blade Lid 1 x Blend Blade Lid	
Jars Included	3 Jars: 700 mL Transparent Jar 300 mL Transparent Jar 300 mL Stainless Steel Jar	 Chopper ☐
Safety Lock Feature	Yes ☒	
Acessories	3 Jars, 2 Lids, 2 Blade Lids	
Warranty	2 Years	

REPLACEMENT PARTS

To order additional parts and attachments, visit curaahome.com

PRODUCT REGISTRATION

Please log onto curaahome.com and complete the online warranty form with your personal and product details within 14 days.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

cūraa

TWO (2) YEAR LIMITED WARRANTY

Dear Customer,

Thank you for choosing a **Cūraa** consumer product.

All Cūraa home products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Cūraa, we believe in providing not only service, but adding value to your kitchen. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

This Cūraa consumer product is covered against manufacturing defects from the date of purchase. The warranty is not transferable from one user/customer to another.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in Cūraa's sole discretion, will be repaired or replaced up to two (2) year from the original purchase date. In case of repairs or replacement of any part(s) of the product, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as blending jars, lids, blade lids, power base, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at yflhome.com.
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by Cūraa. These defects include damages caused in the process of shipping, altering, or repairing the Cūraa product or any of its parts when the repair is performed by a repair person not authorized by Cūraa.
6. Products purchased, used, or operated outside India.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit curaahome.com for product care and maintenance self-help.

Our Customer Service

Specialists are also available at

Email: support@curaahome.com

Phone: +91 86554 78726, WhatsApp: +9179482 23620

to assist with product support and warranty service options.

To make a warranty claim, you must provide proof of purchase.

For recipes follow this QR



@yflhome

Sevenschef Consumers Home & Kitchen Private Ltd.

☎ **+91 86554 78726** 📞 **+91 79482 23620**

🌐 **www.curaahome.com**

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.