



ChopLab Neo

O W N E R ' S G U I D E



by YFL home

THANK YOU FOR PURCHASING

ChopLab Neo



REGISTER YOUR PURCHASE



curaahome.com



+91 86554 78726



+91 79482 23620

RECORD THIS INFORMATION

Serial Number: _____

Date of Purchase: _____

(Keep receipt)

Online Site: _____

TECHNICAL SPECIFICATIONS

Bowl Capacity:	250ML
Rated Wattage:	30W ^{max}
Rated Voltage:	3.7V ^{max}
Battery:	1500 mAh
Rated Current:	10A
Charging Voltage:	5V
Charging Current:	0.3A ^{max}

IS: 302



PART 1: 2024

CM/L - 8530156019

www.bis.gov.in

BWM Certificate No.: 70285666

**PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.**

CONTENTS

Important Safeguards	4
Getting to Know Your ChopLab Neo	5
Parts.....	5
How to Operate your ChopLab Neo	6
Before First Use.....	6
Quick Guide to Processing Ingredients	7
Care & Maintenance	8
Troubleshooting Guide	9
Product Registration	10
DO's and DON'TS	10
Warranty	11

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

WARNING

To reduce the risk of fire, electric shock, serious injury, death, or damage when using this appliance, follow these basic safety precautions.

General Precautions

- 1 This product is a Portable Vegetable Shredder with rechargeable battery. Please fully charge it before first use.
- 2 To make sure that the blade is installed in place to rotate freely before adding ingredients.
- 3 **DO NOT** use sharp objects to scratch the machine.
- 4 It is strictly forbidden to over load the machine.
- 5 Never put the machine into a microwave oven to heat or freeze in the refrigerator to avoid damage to the machine.
- 6 This product cannot be used to process hard food, such as coffee beans, soybeans, gelatin, rice, ice cubes or frozen food, vice versa.
- 7 It is strictly forbidden to touch the detachable parts such as blades and spindle (the detachable parts) during operations, to avoid any injury or damage.
- 8 **DO NOT** operate the machine continuously for more than 30 seconds. It will stop automatically after 30 seconds and requires a 2-minute cooling period before the next use to prevent any damage.
- 9 The blades are very sharp. **DO NOT** touch the edge directly with your hand. When removing or installing the blade, hold the top of the rod connecting to the blades & the spindle.
- 10 **DO NOT** use steel wool, abrasive cleaners or corrosive liquids such as petrol or acetone to clean the product. The product can be rinsed directly with clean water (except for the motor unit).

 
- 11 **DO NOT** put any parts of this machine into the dishwasher.
- 12 Store the product in a place that is not accessible to children. **DO NOT** allow persons (including children) with physical, sensory or mental disabilities or lack of experience and knowledge to use or play with the product.
- 13 This product is for personal or household use only and **not for commercial use.**

CAUTION

Be careful when removing the blade, emptying the cleaning bowl. Be careful when cleaning, avoiding hands injured by the blade.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR CHOPLAB NEO

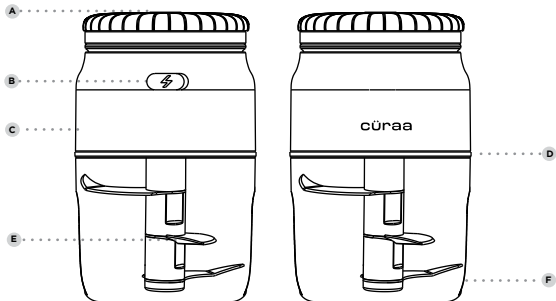

PARTS

- A Push Button
- B C-Type Charging Socket
- C Motor Unit
- D Separation Plate
- E Blades
- F Bowl

Images Just for Reference Only

HOW TO OPERATE YOUR CHOPLAB NEO

BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 4-5 before proceeding.

 
NOTE: Handle the Blade Assembly by grasping around the top of the blade assembly (small circular disk at the top).

NOTE: All Attachments are Food Grade. Ensure blade assembly and lid are removed from the jar before cleaning & scraping.


- 1 Before first use, Do plug and fully charge the unit, and the red light's on when charging while off if full. Clean the blade, chopping cup and separation plate before the first use.



- 2 Insert the chopping blade onto the centering shaft in the processing bowl. Be careful when handling the sharp blades. Add food to be processed into the processing bowl.

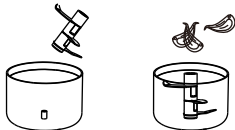

 - 3 Then insert the the separation plate onto the bowl, then put the motor head on and align spindle & stem in place on place rotate clockwise to security lock. Push the switch and start to process. The blades will be blocked if it is over loaded when start. Do reduce the amount of the food then go on.

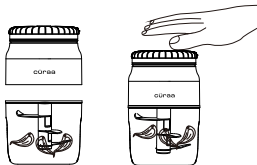

- 4 Use the portable vegetable shredder in 15-second cycles. If the food requires more processing, repeat the cycle. After use, detach the motor, remove the separation plate, pour out the contents, and clean the bowl, plate, and blades.

Images Just for Reference Only

QUICK GUIDE TO PROCESSING INGREDIENTS

Ingredient	Cut Size	Time to Chop	Notes
Onion	2 cm pieces	10-15 secs	Chop in short pulses
Garlic	Whole Cloves	5-10 secs	Peel first
Tomato	2-3 cm chunks	5-10 secs	Best for salsa/puree
Carrot	Thin Slices	15-20 secs	Harder, chop small
Nuts	Small Handful	10-15 secs	Use soft nuts only & in short pulses
Green Chilli	Halves	5-8 secs	Remove stems
Herbs (Coriander, mint)	Whole Leaves	5-8 secs	For garnishing/pesto
Boiled Egg	Halves	5-8 secs	For egg salad
Cheese	Small Cubes	8-12 secs	Semi-soft cheese works best

IMPORTANT: Ensure the bowl is not overfilled to allow the separation plate to sit correctly. Advised to fill 2/3 of the bowl capacity.

CARE & MAINTAINANCE

Maintainance:

- 1 Clean the separation plate, blades and bowl immediately after using the product.
- 2 Do not rinse the motor unit directly with water while cleaning; only use a soft warm damp cloth to wipe the outside of the head when cleaning.
- 3 When cleaning, put appropriate amount of detergent in clean water and clean it with a cleaning pad, better cleaning with normal water.
- 4 The blades are very sharp and must not be touched by hands. To avoid injuries, the water should be very clear so that you can see the blades during the cleaning process.
- 5 Do not use abrasive or corrosive cleaning agents for cleaning.
- 6 It is strictly forbidden to sterilize all parts of this product at high temperature.
- 7 After cleaning the product, dry out all of the parts before reassembling. And store the machine in good place
- 8 If the product is not used for a long time, please charge and maintain the product within three months.

Storage:

Always keep the blades wrapped in or inside the Bowl, with the separation plate & motor unit locked to avoid contact.

Recycling:



Dispose of the device in an environmentally friendly manner. It should not be disposed of in the normal domestic waste. Dispose of it at a recycling centre for used electrical and electronic devices.

TROUBLESHOOTING GUIDE

If the device stops working properly, first check whether you are capable of troubleshooting the problem. If you can not, contact customer service.

PROBLEMS	POSSIBLE CAUSE	SOLUTIONS
Won't turn on	Motor Unit not aligned or locked properly	Place the motor unit evenly, align the grooves, press down, and rotate clockwise to lock.
	Battery depleted or low	Fully charge the ChopLab Neo with a rated charger.
Stops working mid-use	Device overheated	Let it rest for 1-2 minutes; process smaller batches.
	Too much food inside bowl	Fill only up to about 2/3 of the bowl's capacity.
Chopping is uneven	Pieces are too large or dense	Cut ingredients into 1-2 cm pieces before chopping.
	Blade is misaligned on shaft	Re-seat the blade securely on the central pin.
Unusual noise or vibration	Blade may be stuck or loose	Turn off the device, clean under the blade carefully, and reassemble.
Light indicator not appearing	Cable or charger issue	Try using a different USB cable or adapter.
Water inside motor/lid area	Moisture from washing the motor/lid directly	Allow a few days of drying in shade. If the issue still exists, contact customer care.

PRODUCT REGISTRATION

Please log onto **curaahome.com** and complete the online warranty form with your personal and product details within 14 days.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

DO's and DON'Ts

DO'S	DON'TS
Cut food into small pieces	Don't put large chunks or whole fruits
Charge fully before first use	Don't use while charging.
Fill only up to 2/3 of the bowl	Don't overfill the bowl
Use short pulses (10-20 secs)	Don't run continuously for >30 secs
Wash bowl & blade after use	Don't immerse the motor/lid in water
Wipe lid/motor with damp cloth	Don't use soaking wet cloths
Store in a dry place	Don't keep it in humid areas
Keep out of children's reach	Don't let kids operate unsupervised

Dear Customer,

Thank you for choosing a **Cüraa by YFL home** consumer product.

All Cüraa home products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Cüraa by YFL home, we believe in providing not only service, but adding value to your kitchen. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

This Cüraa by YFL home consumer product is covered against manufacturing defects from the date of purchase. The warranty is not transferable.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in Cüraa by YFL home's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date. In case of repairs or replacement of any part(s) of the product, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (blade, separation plate & bowl, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty.
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor unit clear of food/water spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by Cüraa by YFL home. These defects include damages caused in the process of shipping, altering, or repairing the Cüraa by YFL home product or any of its parts when the repair is performed by a repair person not authorized by Cüraa by YFL home.
6. Products purchased, used, or operated outside India.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit **curaahome.com** for product care and maintenance self-help.

Our Customer Service Specialists are also available at **Email: support@curaahome.com, Phone: +91 86554 78726, WhatsApp: +9179482 23620** to assist with product support and warranty service options.

To make a warranty claim, you must provide proof of purchase.

For recipes follow this QR



@yfilhome

Sevenchef Consumers Home & Kitchen Private Ltd.

☎ +91 86554 78726 📞 +91 79482 23620

🌐 www.curaahome.com

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.