

cüraa

Grill Neo

O W N E R ' S G U I D E

by YFL home

THANK YOU FOR PURCHASING
Grill Neo



SCAN FOR MORE CÜRAA PRODUCTS

-  curaahome.com
-  +91 7948223620
-  Scan QR code using mobile device

RECORD THIS INFORMATION

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Online Site: _____

TECHNICAL SPECIFICATIONS

Product Type:	Electric Sandwich Maker
Model Number:	CUSMGBL01
Rated Voltage:	230V, AC
Rated Frequency:	50 Hz
Rated Power:	750 Watts
Heating Method:	Dual non-stick fixed plates with automatic thermostat
Overheat Protection:	Automatic thermal cut-off for safety
Plug Type:	ISI certified 3-pin grounded plug
Cord Length:	1 meter
Maximum Use Per Cycle:	10 minutes (then cool briefly)
Standards Compliance:	IS 302-2-9:2009

PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.

CONTENTS

Important Safeguards	4
Getting to Know Your Grill Neo	5
Parts	5
Key Parts Explained	5
How to Operate your Grill Neo	6
Before First Use	6
How To Use	6
Do's & Don'ts	7
Cleaning & Maintenance	8
Troubleshooting Guide	9
Product Registration	10
Warranty	11

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

To reduce the risk of fire, electric shock, serious injury, death, or damage when using this appliance, follow these basic safety precautions.

General Precautions


- 1 Read all instructions prior to using the appliance and its accessories.
- 2 Ensure that your mains voltage matches the voltage specified on the sandwich toaster's rating label.
- 3 **ALWAYS** unplug the appliance from the mains socket when not in use and before cleaning.
- 4 **DO NOT** immerse the appliance, cord, or plug in water, any other liquid.
- 5 **DO NOT** operate the sandwich toaster if the cord or plug is damaged or if the appliance is in an abnormal condition. If the mains cord is damaged, it must be replaced by the Authorised Service Centre.
- 6 **DO NOT** use any accessories that are not recommended by the Brand, as this may result in fire, electric shock, or personal injury.
- 7 **DO NOT** let the cord hang over the edge of a table or counter, or touch any hot surface.
- 8 To disconnect, remove the plug from the wall outlet by holding the plug—never pull the cord.
- 9 Use the appliance only for its intended purpose, and always place it in a dry area.
- 10 **DO NOT** leave the Sandwich toaster unattended while it is in operation.
- 11 **DO NOT** touch any hot surfaces (eg: Non Stick Baking Plates & Top stainless steel Part). Use handle only.
- 12 **ALWAYS** place the appliance on a stable, flat surface while operating.
- 13 Unauthorized dismantling or servicing will void the product warranty.
- 14 **DO NOT** insert oversized food items, metal foil, wraps or utensils into the sandwich toaster, as this may cause fire or electric shock.
- 15 **DO NOT** attempt to remove or dislodge bread slices while the sandwich toaster is in operation.
- 16 The sandwich toaster must not be used near or beneath curtains or other combustible materials. Close supervision is required when children are nearby.
- 17 Always wipe the fixed plates of the sandwich maker with a soft damp cloth before use.
- 18 **DO NOT** use sharp instruments (like metal knife, fork etc.). Always use a heat resistant plastic or wooden spatula to prevent damage to the non-stick coating.
- 19 **This appliance is intended for domestic use only.**

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR GRILL NEO

PARTS

- A Power Indicator (Red Light)
- B Ready Indicator (Green Light)
- C Handle Lock
- D Handle
- E Non-Stick Baking Plates

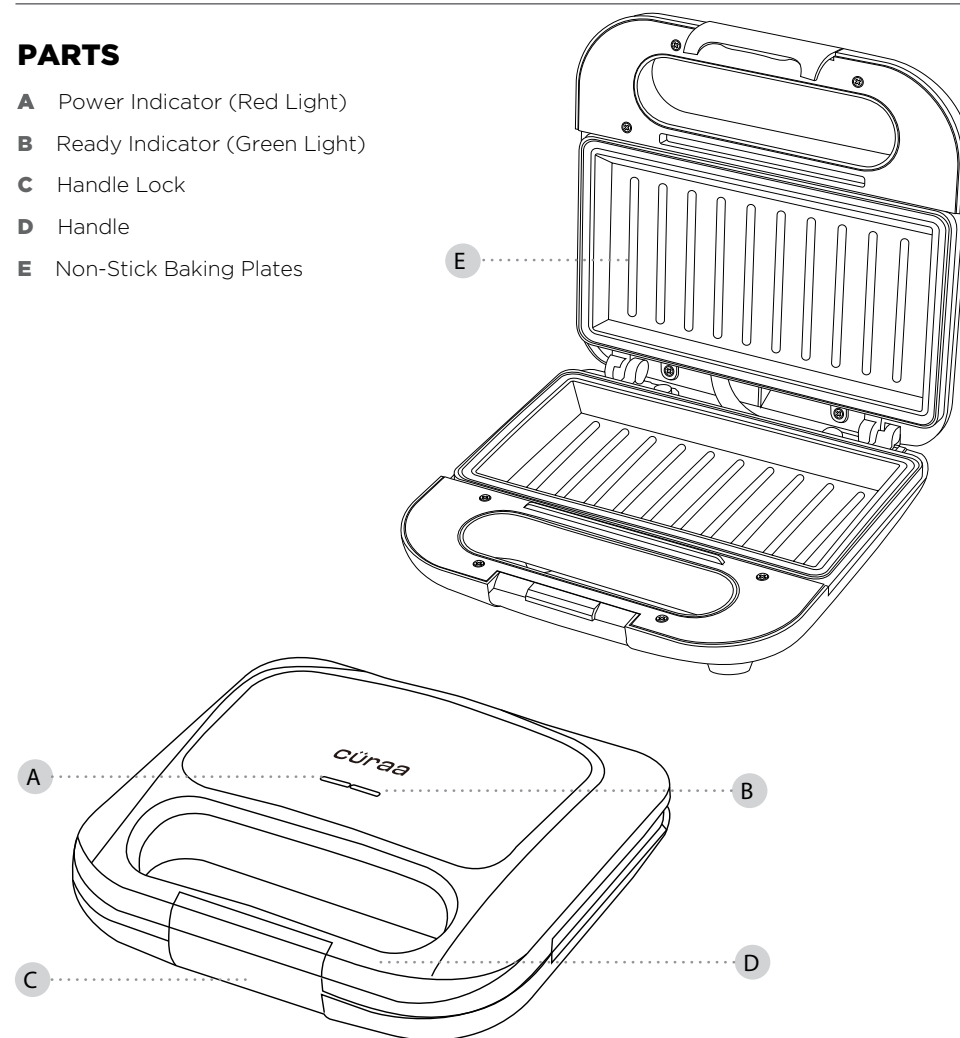

Images Just for Reference Only

Key Parts Explained

- **Power Indicator (Red Light):** Turns on as soon as you plug in.
- **Ready Indicator (Green Light):** Turns on when your sandwich maker is hot enough to start cooking.
- **Non-Stick Plates:** Ensure even toasting and easy removal of sandwiches.
- **Cool-Touch Handle:** So you can safely open and close the sandwich maker.
- **Handle Lock:** Helps press and seal your sandwich for perfect results.

Note: Before using for the first time, wipe the plates with a damp cloth.

HOW TO OPERATE YOUR GRILL NEO

BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 4-5 before proceeding.

Preheat Before Cooking

- 1 Place your sandwich maker on a flat, heatproof surface.
- 2 Plug the power cord into the mains socket. The red indicator light will turn on, indicating that the appliance is powered on.
- 3 Before inserting the bread slices into the sandwich toaster, preheat the appliance until the green light turns on. This indicates that the toaster has reached the pre-set temperature and is ready for use. Preheating usually takes a few minutes.

NOTE: Always preheat the appliance before adding your sandwich. This ensures even toasting and helps prevent sticking.

HOW TO USE

- 1 Take two slices of bread and add the desired filling between them. Always include a filling to ensure optimal toasting.
- 2 Lightly butter both the top and bottom sides of the sandwich to help achieve a golden, crispy finish.
- 3 After preheating, carefully open the sandwich toaster and place the sandwich between the lower and upper plates, ensuring that the buttered sides face the plates.
- 4 Close the sandwich toaster slowly and gently. Make sure it is closed securely.
- 5 The green indicator light will turn off after a few seconds, indicating that the toasting process has begun.
- 6 The green light will turn on again once toasting is complete.
- 7 Open the sandwich toaster and carefully remove the sandwich. If you prefer a darker or crispier toast, close the toaster again and toast for a bit longer.
- 8 You can stop the operation at any time by unplugging the power cord from the socket.

DO'S & DON'TS

DO'S	DON'TS
Always preheat Grill Neo before cooking.	Don't leave Grill Neo plugged in when unattended.
Always apply a light coating of oil or butter to the non-stick plates before the first use.	Never immerse Grill Neo in water, always use soft damp cloth for cleaning.
Use medium bread slices.	Don't overfill with too much filling.
Remove sandwiches with wooden or silicone spatula.	Avoid harsh cleaners or scrubbers.
Let it cool before cleaning or storing.	Don't use metal forks or knives on non-stick fixed plates.
Store in a dry place and keep the handle securely locked.	Don't use if the cord is damaged.

⚠ CAUTION

Avoid Overfilling:
If the sandwich has too much filling, it may be difficult to close the toaster. Do not force the lid shut by pressing it hard. Instead, reduce the filling or ensure the bread slices fit properly within the plates and do not extend beyond the edges. Forcing it close may damage the appliance and scratch or peel the non-stick coating.

Use Heat-resistant plastic or wooden spatula:
When removing the sandwich, do not use sharp or metal utensils (such as knives or forks). Always use a heat-resistant plastic or wooden spatula to avoid damaging the non-stick coating.

CLEANING AND MAINTENANCE

- 1 Disconnect the appliance from the mains outlet.
- 2 Let the appliance completely cool down before cleaning.
- 3 Do not immerse the sandwich toaster in water or clean the Grill Neo in running water.
- 4 Wipe the exterior surface with a soft, damp cloth. Never use abrasive cleaning tools.
- 5 If your Sandwich-Toaster is used frequently, accumulated bread crumbs should be removed regularly. Make sure that any possible food leftovers or crumbs are completely removed before using the Sandwich-Toaster again.
- 6 Do not attempt to remove jammed bread slices from the toaster plates without disconnecting the Grill Neo from the power source. Use caution to avoid scratching the non-stick surface.
- 7 Clean the interior non-stick surface with a soft damp cloth and then wipe it thoroughly with a dry cloth.

Recycling:



Dispose of the device in an environmentally friendly manner. It should not be disposed of in the normal domestic waste. Dispose of it at a recycling centre for used electrical and electronic devices.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, unplug unit before troubleshooting.

PROBLEMS	POSSIBLE CAUSE	SOLUTIONS
Appliance does not heat up	Not plugged in properly	Ensure plug is firmly inserted
	Power outlet faulty	Try a different outlet
Bread is undercooked or pale	Appliance not fully preheated	Wait for green ready indicator before use
	Insufficient cooking time	Cook slightly longer
Uneven browning	Bread not centered	Place the sandwich at the center of the bottom plate
	Irregular sandwich thickness	
Filling leaks out during cooking	Sandwich overfilled	Reduce quantity of fillings to prevent overflow
Sandwich sticks to plates	Preheating is skipped	Always preheat Grill Neo fully before use
	Lack of butter on the outer bread surfaces	Lightly butter outer sides of bread
	Residue from previous use	Ensure plates are clean before use
Indicator light cycles on and off	Normal thermostat operation	No action needed; the appliance automatically regulates temperature
Difficult to clean plates	Burnt cheese residue	Allow appliance to cool, apply a drop of oil, wait a few minutes, then wipe gently with a soft cloth

PRODUCT REGISTRATION

Please log onto **curaahome.com** and complete the online warranty form with your personal and product details within 14 days.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

cüraa | Grill Neo

TWO (2) YEAR LIMITED WARRANTY

Dear Customer,

Thank you for choosing a **Cüraa by YFL** home consumer product.

All Cüraa home products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Cüraa by YFL home, we believe in providing not only service, but adding value to your kitchen. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

This Cüraa by YFL home consumer product is covered against manufacturing defects from the date of purchase. The warranty is not transferable from one user/customer to another.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in Cüraa by YFL home's sole discretion, will be repaired or replaced up to two (2) year from the original purchase date. In case of repairs or replacement of any part(s) of the product, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as non-stick fixed plate and indicator lights etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty.
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the non-stick fixed plates free of food spills and debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by Cüraa by YFL home. These defects include damages caused in the process of shipping, altering, or repairing the Cüraa by YFL home product or any of its parts when the repair is performed by a repair person not authorized by Cüraa by YFL home.
6. Products purchased, used, or operated outside India.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit **curaahome.com** for product care and maintenance self-help.

Our Customer Service

Specialists are also available at

Email: support@curaahome.com

Phone: +91 7948223620

to assist with product support and warranty service options.

To make a warranty claim, you must provide proof of purchase.

For recipes follow this QR



@yfilhome

Sevendchef Consumers Home & Kitchen Private Ltd.
+917948223620
www.curaahome.com

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.