 


cüraa

HandMixer

O W N E R ' S G U I D E

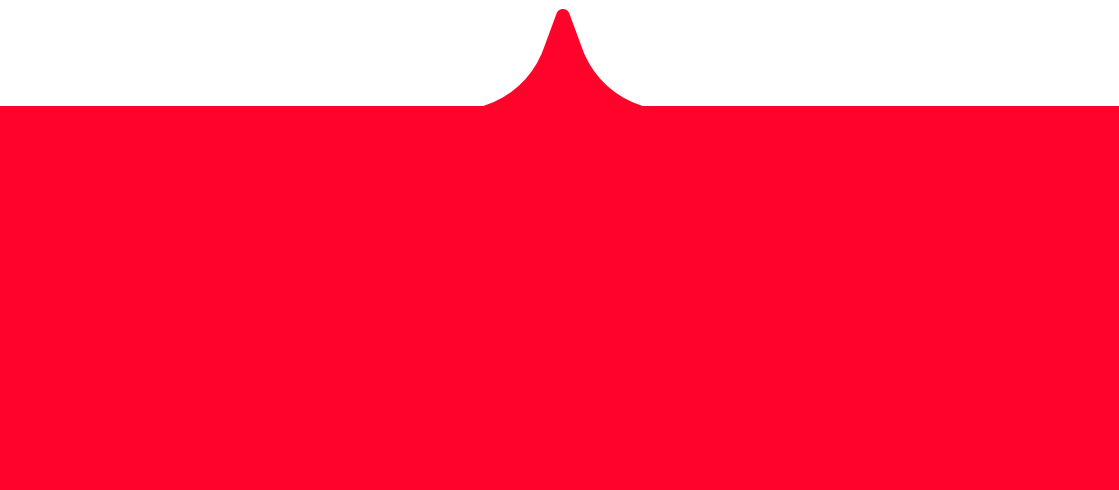

THANK YOU FOR PURCHASING



REGISTER YOUR PURCHASE

-  curaahome.com
-  +91 86554 78726
-  +91 7948223620
-  Scan QR code using mobile device

RECORD THIS INFORMATION

Serial Number: _____

Date of Purchase: _____

(Keep receipt)

Online Site: _____

TECHNICAL SPECIFICATIONS

- Voltage: 230 V
- Frequency: 50 Hz, AC
- Power: 300W
- Motor: Copper Motor

PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.

CONTENTS

Important Safeguards	4
Getting to Know Your Hand Mixer	5
Parts	5
How to Operate your Hand Mixer	6
Before First Use	6
Operating Instructions	6
Troubleshooting Guide	7
Care & Maintenance	8
DO'S & DON'TS	8
Product Registration	8
Warranty	9

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING





To reduce the risk of fire, electric shock, serious injury, death, or damage when using this appliance, follow these basic safety precautions.

General Precautions

- 1 Read all instructions carefully before using the hand mixer.
- 2 Ensure that the mains voltage corresponds to the voltage stated on the specification sticker of the hand mixer.
- 3 **ALWAYS** unplug the hand mixer from the power source when **NOT** in use, before cleaning, and before attaching or removing any attachments.
- 4 **DO NOT** immerse the appliance, cord, or plug in water or any other liquid.
- 5 **DO NOT** operate the hand mixer with a damaged cord or plug, or if it is **NOT** functioning normally. If the power cord is damaged, it must be replaced by an authorized service center.
- 6 Use **ONLY** attachments and accessories recommended by the manufacturer.
- 7 **DO NOT** allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- 8 To **DISCONNECT**, remove the plug from the wall outlet by holding the plug—never pull the cord.
- 9 Use the appliance only for its intended purpose and always place it in a dry area.
- 10 **DO NOT** leave the hand mixer unattended while it is in operation.
- 11 Keep hands, utensils, jewellery, hair, clothing, and other objects **AWAY** from moving or rotating parts during operation to prevent injury or damage.
- 12 **DO NOT** touch any rotating parts. Use the handle only.
- 13 **ALWAYS** place the appliance on a stable, flat surface when operating.
- 14 There are no user-serviceable parts inside the hand mixer. Unauthorized dismantling or servicing will void the warranty.
- 15 Set the speed control to “0” and **UNPLUG** the appliance when not in use. Do not remove attachments until the motor has come to a complete stop.
- 16 **DO NOT** use the hand mixer near or below curtains or other combustible materials.
- 17 Close supervision is required when the appliance is used near children.
- 18 The appliance is intended for **DOMESTIC USE ONLY**.
- 19 **ALWAYS** follow all safety guidelines and instructions provided in the user manual to ensure safe and proper use of the hand mixer.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR HAND MIXER

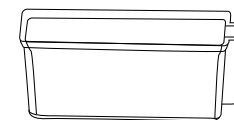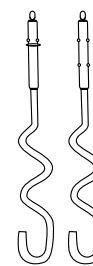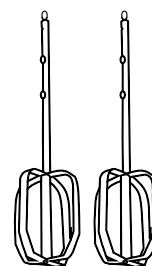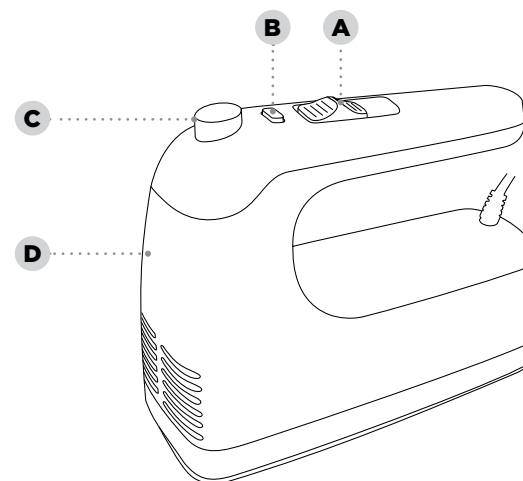

PARTS

- A Speed Setting
- B Turbo Button
- C Eject Button
- D Body
- E Beaters
- F Dough Hooks
- G Whiskers
- H Storage Container

NOTE:



Put the collar and hook into the left opening. To lock into place, align and push.



Place the collarless attachment into the appropriate aperture. To lock into place, align and push.

Images Just for Reference Only

HOW TO OPERATE YOUR HAND MIXER

BEFORE FIRST USE

IMPORTANT: Review all warnings on page 4 before proceeding.

NOTE: All Attachments are Food Grade. Ensure attachments are removed from the body before cleaning.

- 1 Remove all packaging materials from the unit.
- 2 Wash attachments with normal, soapy water.
- 3 Thoroughly rinse and air-dry all parts.

OPERATING INSTRUCTIONS

Assembly:
Select the appropriate attachment for your mixing task (whisk, beaters, or dough hooks). Insert the attachments securely into the designated slots on the Curaa hand mixer until they click into place. Always ensure that the attachments are firmly installed before switching on the appliance to avoid accidents or improper operation.

Preparation:
Prepare all ingredients according to your recipe. Measure and organize them in advance to ensure smooth and efficient mixing.

Adjusting Speed Settings:
Locate the speed control buttons on the hand mixer. Use the controls to select the appropriate speed based on your mixing needs. The Curaa hand mixer features multiple adjustable speed settings, along with a turbo function for added power when handling thicker or heavier mixtures.

Mixing Process:

- Place the desired ingredients into a mixing bowl suitable for use with the hand mixer.
- Hold the hand mixer firmly with one hand and place the attachments into the bowl with the other hand.
- Start mixing at a low speed and gradually increase the speed as needed to achieve the desired consistency.
- Use the turbo boost function for additional power when mixing denser ingredients or larger quantities.

Monitoring and Adjustments:

- Keep a close eye on the mixing process and make any necessary adjustments to the speed settings or mixing technique as needed.
- If the mixer becomes overloaded or begins to struggle, reduce the speed or pause momentarily to allow the motor to cool down

Ejecting Attachments:

- Once you have finished mixing, ensure that the speed control is set to 0 (off) before ejecting the attachments.
- Press the eject button located on the hand mixer to release the attachments from their slots.
- Carefully remove the attachments from the hand mixer and transfer them to a sink or dishwasher for cleaning.

Turbo Function:

- The hand mixer features a turbo function that allows for an extra burst of power when needed .
- This function can be used for more demanding mixing tasks or to achieve quicker results

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, unplug unit before troubleshooting.

PROBLEMS	POSSIBLE CAUSE	SOLUTIONS
Hand mixer does not turn on	Not plugged in or power outlet not working	Ensure the mixer is securely plugged into a working outlet
	Speed set to “0” or “Off”	Select a speed setting above “0”
	Power cord damaged	Stop using the mixer and contact Curaa customer service
Attachments do not rotate properly	Attachments not fully inserted	Reinsert attachments until they lock into place
	Incorrect attachment used	Use the appropriate attachment for the task
	Overloaded ingredients	Reduce ingredient quantity
Mixer stops during operation	Overheating due to prolonged use	Turn off, unplug, and allow to cool for 15–30 minutes
	Mixing at high speed with heavy dough	Resume mixing at a lower speed
Excessive vibration or noise	Attachments improperly installed	Remove and reinstall attachments correctly
	Foreign objects or hardened residue	Clean attachments thoroughly
Ingredients splatter while mixing	Speed too high at startup	Start at low speed and increase gradually
	Bowl too shallow or overfilled	Use a deeper bowl and avoid overfilling
Turbo function not working	Overuse causing overheating	Allow the mixer to cool before using turbo again
Difficulty ejecting attachments	Mixer still powered on	Turn off and unplug before ejecting
	Food residue buildup	Clean attachment slots and try again

DO'S & DON'TS

DO'S	DON'TS
Start mixing on low speed, then increase gradually	Don't start on high speed (prevents splatter)
Use the correct attachments for the task	Don't use beaters for heavy bread dough
Keep ingredients at room temperature	Don't force frozen or very hard ingredients
Hold mixer at a slight angle for even mixing	Don't pull beaters out while they're still spinning
Scrape the bowl regularly (mixer off)	Don't scrape while the mixer is plugged in & running
Use a deep bowl to reduce mess	Don't use shallow bowls that cause splashing
Unplug before changing attachments or cleaning	Don't clean the mixer body under running water
Let the motor rest if it overheats	Don't run the mixer continuously for long periods
Store beaters dry and clean	Don't store beaters wet (can cause rust)

CARE & MAINTAINANCE

Wash attachments after every use with warm soapy water or in the dishwasher as they are **Dishwasher Safe**. Dry them properly and store them in the provided case.

Wipe the hand mixer main body with a soft, damp cloth only.

DO NOT immerse it in water.

Recycling:



Dispose of the device in an environmentally friendly manner. It should not be disposed of in the normal domestic waste. Dispose of it at a recycling centre for used electrical and electronic devices.

PRODUCT REGISTRATION

Please log onto **curaahome.com** and complete the online warranty form with your personal and product details within 14 days.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

cūraa

ONE (1) YEAR LIMITED WARRANTY

Dear Customer,

Thank you for choosing a **Cūraa** consumer product.

All Cūraa home products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Cūraa by YFL home, we believe in providing not only service, but adding value to your kitchen. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

This Cūraa by YFL home consumer product is covered against manufacturing defects from the date of purchase. The warranty is not transferable from one user/customer to another.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in Cūraa's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date. In case of repairs or replacement of any part(s) of the product, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as Beaters, hooks, egg beater, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at curaahome.com.
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the motor base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by Cūraa. These defects include damages caused in the process of shipping, altering, or repairing the Cūraa by YFL home product or any of its parts when the repair is performed by a repair person not authorized by Cūraa.
6. Products purchased, used, or operated outside India.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit **curaahome.com** for product care and maintenance self-help.

Our Customer Service

Specialists are also available at

Email: support@curaahome.com

Phone: +91 86554 78726, WhatsApp: +917948223620

to assist with product support and warranty service options.

To make a warranty claim, you must provide proof of purchase.

For recipes follow this QR



@yfilhome

Sevenschef Consumers Home & Kitchen Private Ltd.

☎ **+91 86554 78726** 📞 **+91 7948223620**

🌐 **www.curaahome.com**

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.