

cüraa

IndiePro

O W N E R ' S G U I D E

by YFL home

THANK YOU FOR PURCHASING



SCAN THE QR CODE TO
REGISTER YOUR PURCHASE

 curaahome.com

 +91 86554 78726

 +91 79482 23620

RECORD THIS INFORMATION

Serial Number: _____


Date of Purchase: _____
(Keep receipt)

Online Site: _____

TECHNICAL SPECIFICATIONS

Voltage: 230 V
Frequency: 50 Hz, AC
Power: 2100W

IS: 302-2-6: 2009

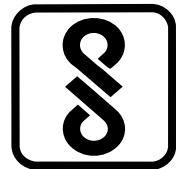

R-91022225

PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.

CONTENTS

Important Safeguards 4

Getting to Know Your Induction Cooktop 5

Parts 5

Functions 6

Function Keys 6

Function Description 6

How to Operate your Induction Cooktop 8

Before First Use 8

Troubleshooting Guide 10

Fault Codes 11

Care & Maintenance 11

DO'S & DON'TS 12

Product Registration 12

Warranty 13

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

To ensure your safety and minimize the risk of personal injury & property damage, please observe the following safety precautions.

General Precautions

- 1 Read all instructions carefully before using the Induction Cooktop.
- 2 The plate remains hot after use; **DO NOT** touch it with your hands.
- 3 **DO NOT** immerse the machine in water for cleaning. To prevent electric shock, **NEVER** immerse the unit, cord, or plug in any liquid.
- 4 If the power cord is damaged, **ALWAYS** replace it with the specific & compatible cord at a specialized store.
- 5 **ALWAYS** keep the appliance away from children during use.
- 6 **ALWAYS** ensure someone is monitoring the appliance during operation.
- 7 **NEVER** place paper, towels, or flammable items on the heating surface to avoid fire.
- 8 **ALWAYS** use a dedicated power socket rated for more than 10A.
- 9 **DO NOT** allow children or those with reduced capabilities to use the device unsupervised.
- 10 **NEVER** insert wires or metal items into the air vents to avoid electric shock.
- 11 **DO NOT** heat sealed containers or apparatus to avoid the risk of explosion.

⚠ CAUTION

If the surface is cracked, or the cord is damaged switch off the device immediately & **DO NOT** use the appliance until it has been repaired by a qualified technician

- 12 **DO NOT** use pots with distorted bottoms; uneven heating may break the plate.
- 13 For household and indoor use only.
- 14 **ALWAYS** unplug from the outlet when not in use and before cleaning.

IMPORTANT:


The fan continues to run after use; **DO NOT UNPLUG** until the fan has stopped.

- 15 **ALWAYS** use the appliance only for its intended purpose as described in this manual.
- 16 **DO NOT** use any part of the appliance outside of its intended use to avoid risk.
- 17 This device may be used by children 8+ or those with reduced capabilities if supervised.
- 18 **ALWAYS** ensure safe usage and awareness of hazards. Children must not play with the appliance.
- 19 **NEVER** place metallic objects like knives, forks, or lids on the plate as they get hot.

GETTING TO KNOW YOUR INDUCTION COOKTOP

PARTS

- A Body
- B Cooktop Heating Surface
- C Timer Button
- D Control Knob with Display
- E Boost Button

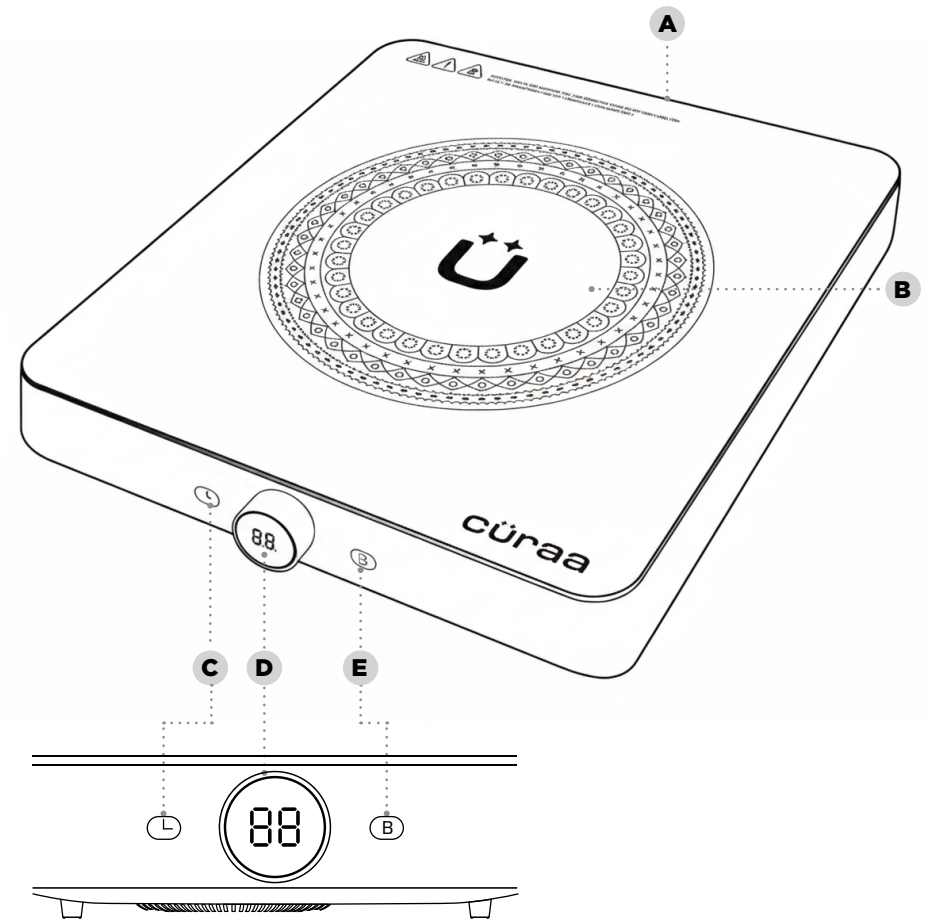

Images Just for Reference Only

SAVE THESE INSTRUCTIONS



Functions

Functions Keys

Key	Specification of button function
Control Knob	Press the center of the control knob to power on the device. & Rotate the control knob to adjust the power level from P1 to P9 .
Boost Button (B)	Press the BOOST (B) button once to activate the Boost function, and press it again to exit. When the Boost function is activated, the display will show " PP ", and the machine will operate at maximum power. After 5 minutes, the machine will automatically deactivate the Boost function and return to the previous operating mode.
Timer Button (L)	Press the TIMER (L) button once to activate the timer function. & Rotate the control knob to adjust the time from 01 to 99 minutes.

Function Description

Function	Working Process
Power (Manual function)	After plugging in the Cüraa induction cooktop, press the center of the knob to turn it on. The display will show the default power level P7. The Cüraa induction cooktop has 10 power levels: P1 to PP  P7 - Default power level  P1 - Minimum power level  PP - Boost function (maximum power level) You can adjust the power level by turning the knob:  Turn clockwise to increase the power level  Turn anticlockwise to decrease the power level

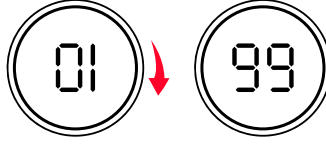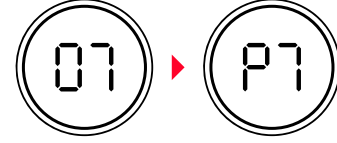Function	Working Process
Boost Function (B)	When the BOOST (B) function is activated, the display will show "PP", and the machine will operate at maximum power. After 5 minutes, the machine will automatically deactivate the Boost function and return to the previous operating mode.  PP - Displayed when BOOST (B) is activated
Timer Function (L)	Before using the TIMER (L) function, confirm that the current cooking mode is correct. After selecting the power level, press the TIMER (L) button to enter timer mode & rotate the control knob to set the time from 01 to 99 minutes.  Set TIMER (L) Function During operation, the LED screen will display "00" if no time has been set. After setting the desired time, the timer will be automatically confirmed and the countdown will begin.  "00" displayed if No time is set NOTE: The Cüraa Induction Cooktop will automatically turn off once the set time is completed. After the timer is set, the LED screen will alternate between displaying the remaining time and the power level.  Time Remaining Power Level NOTE: If no timer is set and no other operation is performed, the cooktop will automatically turn off after 2 hours.

HOW TO OPERATE YOUR INDUCTION COOKTOP

BEFORE FIRST USE

IMPORTANT: Review all warnings on page 4 before proceeding.

NOTE: Remove all packaging materials from the unit.



Quick Start Guide

Get started after connecting to power.

Turn the Device On


- After connecting to a 230V ~ 50Hz, 16A socket, press the center Power button on the knob for 1 second to switch on.
- The display will light up and enter standby mode.

NOTE: Place induction-compatible cookware before starting.

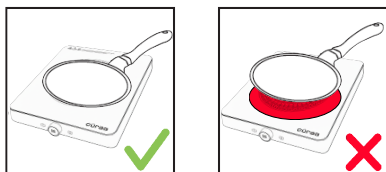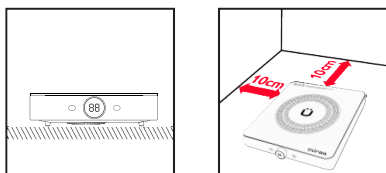


Use Below Cookware

Use cookware with a flat bottom made of iron or magnetic stainless steel, and with a bottom diameter of **12 - 20 cm**

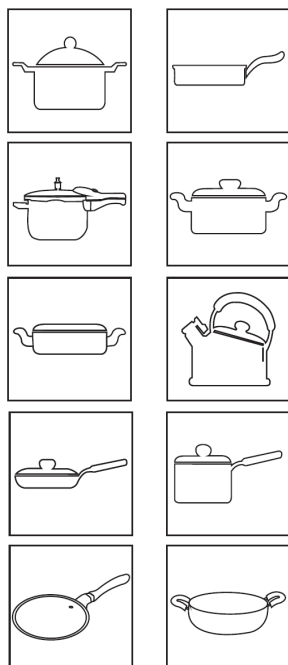

Do Not Use Below Cookware

DO NOT use cookware with a concave or convex bottom made of non-iron metal, heat resistant glass pots, ceramic, glass, aluminium and copper, or with a bottom diameter of less than 12cm or more than 20cm.

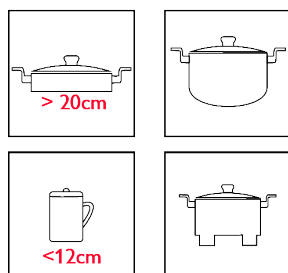

Adjust Power or Timer

- Turn the knob clockwise to increase power and anti-clockwise to decrease.




Turn clockwise to increase the power level



Turn anticlockwise to decrease the power level

- To set cooking time, press the **TIMER** button, then rotate the knob to set **1-99** minutes.

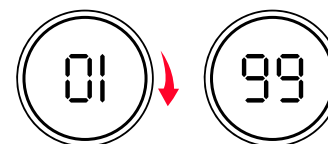

Set **TIMER** button

NOTE: The unit will auto switch-off when the timer ends.

NOTE: HH indicates that the crystal plate temperature is too high. Do not touch.

Select Cooking Mode

Power Level	Heat Level	Best For Indian Dishes
P1 - P2	Low Heat	Simmering dal, keeping sabzi warm, melting butter/ghee
P3 - P4	Low-Medium	Making chai, boiling milk, preparing soups
P5 - P6	Medium	Cooking sabzi, poha, upma, pulao
P7 - P8	Medium-High	Frying onions, making curry base, rajma, chole
P9	High	Deep frying samosa, pakora, puri
PP (Boost)	Maximum Power	Rapid boiling water, pressure cooker preheating, quick tadka

NOTE: If the Cüraa induction Cooktop operates at **PP (Boost level)**, it will automatically return to **P9** after **5 minutes** for safety protection.

Turn Off After Cooking

- After cooking is finished, press and hold the Power button for 2 seconds to switch off.
- The cooling fan will continue running for a short time — this is normal.

NOTE: The unit will auto switch-off when the timer ends.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, unplug unit before troubleshooting.

PROBLEMS	POSSIBLE CAUSE	SOLUTIONS
Induction Cooktop Does not turn on	Power cord loose	Plug in properly
	No power from socket	Check with another device
	Induction in standby mode	Press the knob to turn on the Cüraa Cooktop
Power is on but no heating	Cookware not detected	Place cookware in center
	Cookware is not induction compatible	Use induction-compatible cookware with a flat magnetic bottom. (Refer page 8)
	Cookware base is too small	Use cookware with a base diameter larger than 12 cm. (Refer page 8)
Heating is weak	Induction set on low power mode	Increase the power level using the control knob
	Improper cookware	Use thick, flat magnetic bottom Cookware
Stops during cooking	Overheat protection activated	Let the induction cool down
	Air vents blocked	Clear ventilation area
	Timer finished	Restart cooking
BOOST ^(B) mode not working	Boost works only at certain power levels	Adjust the knob to choose the correct power mode.
	Cooker overheated	Allow the cooker to cool down before using Boost mode again
	Boost Mode runs for a 5 minutes Max	Normal safety protection
Timer not working	Timer not activated properly	Press timer button again
	Cooking stopped after timer	Normal operation




FAULT CODES

If the device is not working properly, the LED display will show an error code. Please use the table below to find the error and resolve the issue.

Fault Code	Cause	Solution
E0	No Cookware Detection, Cookware is removed or inapplicable	Automatically resume operation when suitable cookware is placed on it
E1	Low-voltage protection activated, voltage Lower than 130 V	Automatically recover when the voltage returns to normal.
E2	Over-voltage protection activated, voltage higher than 275 V	
E3	Sensor has a short circuit, open circuit, or has failed.	Please contact Cüraa after-sales service for maintenance.
E4	IGBT sensor open and short circuit protection	
E5	"Overheating protection activated, Temperature Too High - IGBT temperature exceeds 105°C "	Automatically recover when the temperature decreases
E6	Power tube overheating protection	
E7	Surface sensor failure protection	
E9	Connection failure	Please contact Cüraa after-sales service for maintenance.
E	The coil plate is not connected or has an open circuit	
HH	The Glass Plate temperature is too high, Do Not Touch	Automatically recover when the temperature decreases

CARE & MAINTAINANCE

- 1 ALWAYS UNPLUG** the Cüraa Induction Cooktop from the power outlet when it is not in use and before cleaning.
- 2 DO NOT** use acidic or alkaline cleaning agents to clean the appliance. **ALWAYS** use a neutral cleaner.
- 3 DO NOT** place the Cüraa Induction Cooktop directly in water for cleaning.
- Wipe the Cüraa Induction Cooktop with a clean, soft, damp cloth to keep it clean. When not in use for an extended period, store it in a cool, dry, dust-free place.

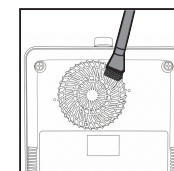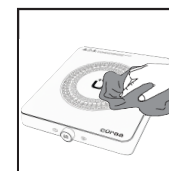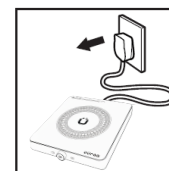

DO'S & DON'TS

DO'S	DON'TS
Use a 230V AC power supply with a dedicated 16 Amp socket.	Do not use aluminum, copper, glass, or ceramic cookware.
Use only induction-compatible (magnetic) cookware.	Do not operate without cookware placed on the heating area.
Ensure cookware has a flat bottom (12-20 cm diameter).	Do not touch the surface when display shows "HH" (hot surface).
Place the cooktop on a flat, stable, heat-resistant surface.	Do not block ventilation openings.
Keep air inlet and outlet vents clear and unblocked.	Do not immerse the unit, cord, or plug in water.
Center the cookware properly on the heating zone.	Do not use damaged power cords or loose sockets.
Allow the cooling fan to stop before unplugging.	Do not heat sealed containers (To avoid risk of explosion).
Clean the surface with a soft cloth and mild cleaner after cooling.	Do not place metal objects (spoons, knives, lids) on the cooktop.
Unplug the appliance when not in use.	Do not use if the glass surface is cracked or damaged.
Keep the appliance away from children during operation.	Do not use extension cords with low current rating.

PRODUCT REGISTRATION

Please log onto **curaahome.com** and complete the online warranty form with your personal and product details within 14 days.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

Recycling:



Dispose of the device in an environmentally friendly manner. It should not be disposed of in the normal domestic waste. Dispose of it at a recycling centre for used electrical and electronic devices.

cüraa

TWO (2) YEAR LIMITED WARRANTY

Dear Customer,

Thank you for choosing a **Cüraa** consumer product.

All Cüraa home products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Cüraa, we believe in providing not only service, but adding value to your kitchen. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

This Cüraa consumer product is covered against manufacturing defects from the date of purchase. The warranty is not transferable from one user/customer to another.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in Cüraa's sole discretion, will be repaired or replaced up to two (2) year from the original purchase date. In case of repairs or replacement of any part(s) of the product, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as glass surface, printed markings, control panel buttons, power cord, or external body, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at curaahome.com.
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., Physical damage to the glass top (cracks or breakage), mishandling or improper operation, failure to keep the cooktop clean and vents free from food spills and debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by Cüraa. These defects include damages caused in the process of shipping, altering, or repairing the Cüraa product or any of its parts when the repair is performed by a repair person not authorized by Cüraa.
6. Products purchased, used, or operated outside India.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit **curaahome.com** for product care and maintenance self-help.

Our Customer Service

Specialists are also available at

Email: support@curaahome.com

Phone: +91 86554 78726, WhatsApp: +9179482 23620

to assist with product support and warranty service options.

To make a warranty claim, you must provide proof of purchase.

For recipes follow this QR



@yfilhome

Sevenschef Consumers Home & Kitchen Private Ltd.

☎ **+91 86554 78726** 📞 **+91 79482 23620**

🌐 **www.curaahome.com**

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.