 


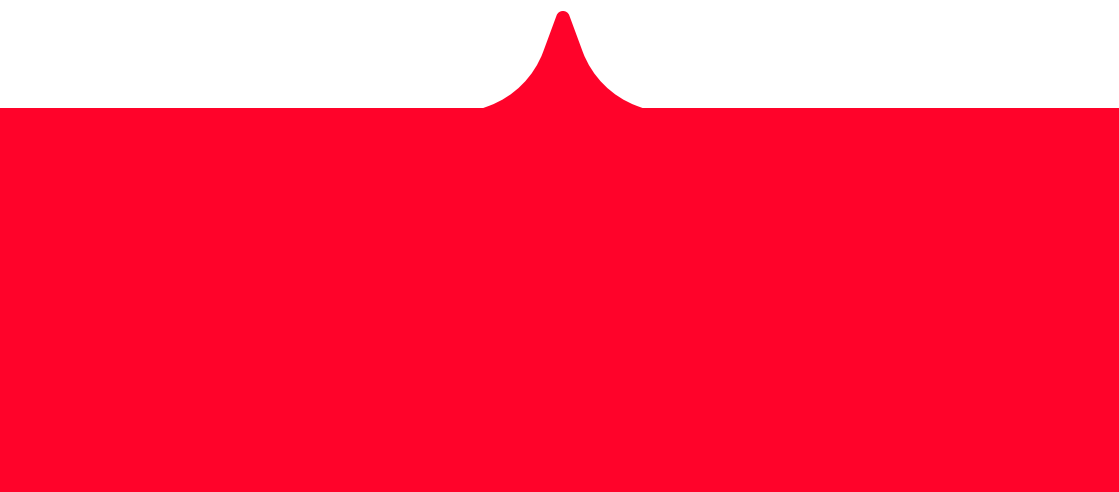

Infrared Cooktop

O W N E R ' S G U I D E



THANK YOU FOR PURCHASING



**SCAN THE QR CODE TO
REGISTER YOUR PURCHASE**



curaahome.com



+91 86554 78726



+91 79482 23620

RECORD THIS INFORMATION

Serial Number: _____

Date of Purchase: _____
(Keep receipt)

Online Site: _____

TECHNICAL SPECIFICATIONS

Voltage: 230 V
Frequency: 50 Hz, AC
Power: 2100W

**PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.**

CONTENTS

- Important Safeguards 4**
- Getting to Know Your Infrared Cooktop 5**
 - Parts 5
- Functions 6**
 - Function Keys 6
 - Function Description 6
- How to Operate your Infrared Cooktop 8**
 - Before First Use 8
- Troubleshooting Guide 10**
- Fault Codes 11**
- DO'S & DON'TS 12**
- Care & Maintenance 13**
- Product Registration 13**
- Warranty 14**

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

To ensure your safety and minimize the risk of personal injury & property damage, please observe the following safety precautions.

General Precautions

- 1 The heating plate remains hot after use. **DO NOT** touch the surface with your hands.
- 2 **DO NOT** immerse the appliance in water or clean it directly with water.
- 3 If the power cord is damaged, it must be replaced by the manufacturer, an authorised service centre, or a similarly qualified person using the appropriate replacement cord.
- 4 Keep the appliance away from children.
- 5 The appliance must be supervised while in use.
- 6 **DO NOT** operate the Curaa Infrared Cooktop without cookware or burn it empty.
- 7 **DO NOT** place paper, towels, or other flammable materials on the heating surface, as this may cause a fire.
- 8 Use a suitable electrical socket rated at more than 10 A.
- 9 **DO NOT** allow children or persons who are unable to operate the appliance safely to use it without appropriate supervision.
- 10 **DO NOT** insert metal or other objects into the air inlet or outlet, as this may cause electric shock.
- 11 **DO NOT** heat sealed containers or vessels, as this may cause an explosion.

⚠ CAUTION

If the surface is cracked, or the cord is damaged switch off the device immediately & **DO NOT** use the appliance until it has been repaired by a qualified technician

- 12 **DO NOT** barbecue food directly on the appliance.

IMPORTANT:

The fan continues to run after use; **DO NOT UNPLUG** until the fan has stopped.


- 13 **ALWAYS** unplug the appliance before cleaning or when it is not in use.
- 14 To avoid electric shock, **DO NOT** immerse the appliance, power cord, or plug in water or any other liquid.
- 15 Use the appliance only for the purposes described in this manual.
- 16 **DO NOT** use the appliance or any of its components for purposes other than those intended.
- 17 If the supply cord is damaged, it must be replaced by the manufacturer, an authorised service agent, or a similarly qualified person.
- 18 Metallic objects such as knives, forks, spoons, and lids should not be placed on the hotplate because they may become hot.
- 19 The appliance is not intended to be operated using an external timer or a separate remote-control system.
- 20 **DO NOT** place cookware with weight more than 8kg (including contents) on the cooktop.
- 21 **DO NOT** block the air intake/exhaust vents

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR INFRARED COOKTOP

PARTS

- A** Body
- B** Cooktop Heating Surface
- C** Timer Button
- D** Control Knob with Display
- E** Child Lock Button

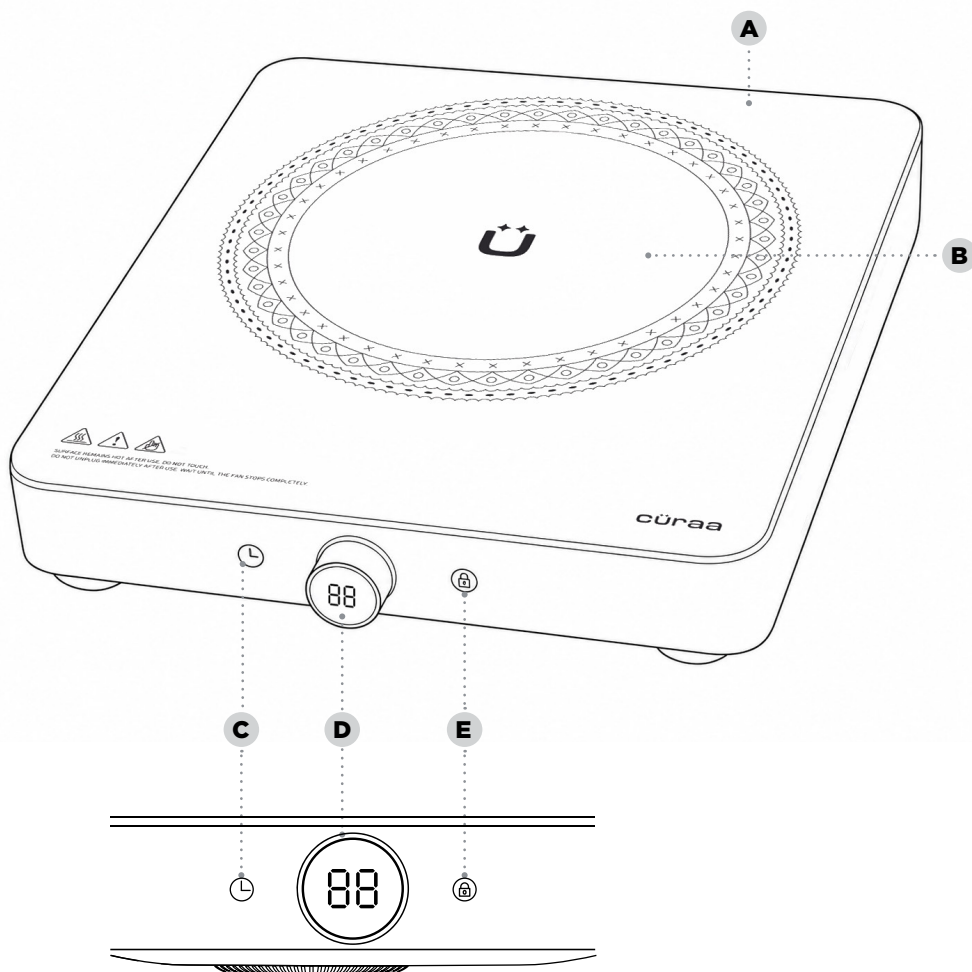

Images Just for Reference Only



Functions

Functions Keys

Key	Specification of button function
Control Knob	Press the center of the control knob for 1 second to power on the device & Rotate the control knob to adjust the power level from P1 to P9 .
Child Lock 	CHILD LOCK  is a safety feature designed to prevent children from accidentally operating the cooktop. When activated, the control panel buttons are locked, helping prevent unintended changes to the cooking settings.
Timer Button 	Press the TIMER  button once to activate the timer function. & Rotate the control knob to adjust the time from 01 to 99 minutes.

Function Description

Function	Working Process
Power (Manual function)	After plugging in the Cüraa infrared cooktop, press the center of the Knob for 1 Second to turn it on. The display will show the default power level P9. The Cüraa infrared cooktop has 9 power levels: P1 to P9  P9 - Default power level  P1 - Minimum power level  P9 - Maximum power level You can adjust the power level by turning the knob:  Turn clockwise to increase the power level  Turn anticlockwise to decrease the power level

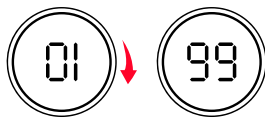  Function	Working Process
Child Lock 	When the CHILD LOCK  function is activated, the display will show "LL", and the control buttons will not operate. To Activate: Press and hold the CHILD LOCK  button for 1 second. The lock icon will light up, and "LL" will appear briefly. When Locked: The control buttons will not operate, and "LL" will appear when a button is pressed. To Deactivate: Press and hold the CHILD LOCK  button for 1 second to unlock the controls.  LL - Displayed when Child Lock  is activated
Timer Function 	Before using the TIMER  function, confirm that the current cooking mode is correct. After selecting the power level, press the TIMER  button to enter timer mode & rotate the control knob to set the time from 01 to 99 minutes.  Set TIMER  Function During operation, the LED screen will display "00" if no time has been set. After setting the desired time, the timer will be automatically confirmed and the countdown will begin.  "00" displayed if No time is set NOTE: When the set time ends, the Cüraa Infrared cooktop automatically switches off and sounds a buzzer. After the timer is set, the LED screen will alternate between displaying the remaining time and the power level.  Time Remaining Power Level NOTE: If no timer is set and no other operation is performed, the cooktop will automatically turn off after 2 hours.

HOW TO OPERATE YOUR INFRARED COOKTOP

BEFORE FIRST USE

IMPORTANT: Review all warnings on page 4 before proceeding.


NOTE: Remove all packaging materials from the unit.

Quick Start Guide

Get started after connecting to power.

Turn the Device On

- 1 After connecting to a 230V ~ 50Hz, 16A socket, press the center Power button on the knob for 1 second to switch on.
- 2 The display will light up and enter standby mode.

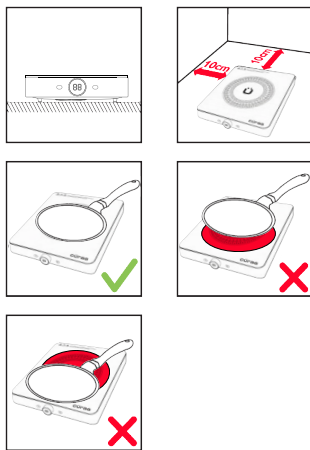


Use Below Cookware

Cüraa's Infrared cooktop is designed to work with all common cooking utensils. Infrared technology heats the cookware directly through radiant heat, making it suitable for:

Aluminum Cookware
Stainless Steel Cookware
Non-Stick Cookware
Hard Anodized Cookware
Copper Cookware
Ceramic Cookware
Glass Cookware
Cast Iron Cookware

For best performance, the cookware should have a flat base that adequately covers the heating zone, with a bottom diameter of **12-22 cm**.

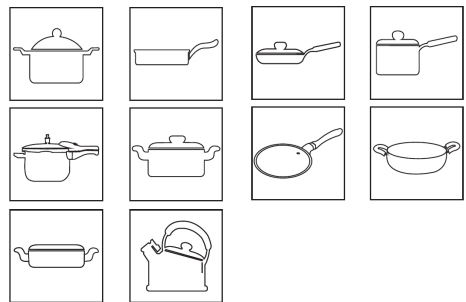

NOTE: Do not use lightweight cookware on the Curaa Infrared Cooktop.

Light-base cookware may heat unevenly, become excessively hot, or move / Shake during cooking, which can affect cooking performance and may cause damage to the cookware or cooktop.

Adjust Power or Timer

- 1 Turn the knob clockwise to increase power and anti-clockwise to decrease.




Turn clockwise to
increase the power level



Turn anticlockwise to
decrease the power level

- 2 To set cooking time, press the **TIMER** ⌚ button, then rotate the knob to set **1-99** minutes.

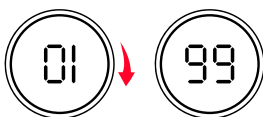

Set **TIMER** ⌚ Function

NOTE: The unit will auto switch-off and sounds a buzzer when the timer ends.

NOTE: HH indicates that the crystal plate temperature is too high. Do not touch.

Select Cooking Mode

Power Level	Heat Level	Best For Indian Dishes
P1 – P2	Low Heat	Simmering dal, keeping sabzi warm, melting butter/ghee
P3 – P4	Low-Medium	Making chai, boiling milk, preparing soups
P5 – P6	Medium	Cooking sabzi, poha, upma, pulao
P7 – P8	Medium-High	Frying onions, making curry base, rajma, chole
P9	High	Deep frying samosa, pakora, puri Rapid boiling water, pressure cooker preheating, quick tadka

Turn Off After Cooking

- 1 After cooking is finished, press and hold the Power button for 1 second to switch off.
- 2 The cooling fan will continue running for a short time — this is normal.

NOTE: The unit will auto switch-off and sounds a buzzer when the timer ends.

TROUBLESHOOTING GUIDE

WARNING: To reduce the risk of shock and unintended operation, unplug unit before troubleshooting.

PROBLEMS	POSSIBLE CAUSE	SOLUTIONS
No Power / Unit Does Not Turn On	Power cord is not properly connected.	Ensure the power cord is securely connected.
	Socket or power supply may be faulty.	Check the socket and power supply.
	Power supply is switched off.	Ensure the power supply is switched on.
Unit Does Not Start After Switching On	Moisture or water is present on the glass surface.	Switch off the appliance and wipe the glass surface completely dry before use.
Appliance Stops Suddenly During Operation	Ambient temperature is too high.	Move the appliance to a cooler, well-ventilated location.
	Air inlet/outlet is blocked.	Ensure the air inlet and outlet are not blocked.
	Timer setting has expired.	Check and reset the timer if required.
	Appliance has been operating continuously for more than 2 hours.	Allow the appliance to cool before using it again.
Display Turns On but No Heating	Internal circuit board may be damaged.	Switch off and unplug the appliance. Contact an authorised CÜRAA service centre for inspection and repair.
	Heating element may be damaged.	

IMPORTANT: If the appliance continues to malfunction after following the above solutions, unplug the appliance and contact an authorised CÜRAA service centre. Do not attempt to repair or disassemble the appliance yourself.

FAULT CODES

If the device is not working properly, the LED display will show an error code. Please use the table below to find the error and resolve the issue.

Fault Code	Possible Cause	Solution
E1	Furnace sensor open-circuit or short-circuit protection	Switch off and unplug the cooktop. Please contact Cüraa after-sales service for maintenance.
E2	Thyristor sensor open-circuit or short-circuit protection	Switch off and unplug the cooktop. Please contact Cüraa after-sales service for maintenance.
E3	Over-voltage protection	Automatically recover when the voltage returns to normal.
E4	Low-voltage protection	Automatically recover when the voltage returns to normal.
E5	Fan current protection	Ensure the air inlet and outlet are not blocked. Allow the appliance to cool and restart it. If the error persists, Please contact Cüraa after-sales service for maintenance.
E6	Thyristor over-temperature protection	Switch off the appliance and allow it to cool completely. Ensure adequate ventilation before restarting. If the error persists, Please contact Cüraa after-sales service for maintenance.

SERVICE & SADETY NOTE: IDo not continue using the appliance if an error code repeatedly appears. Unplug the appliance and contact an authorised CÜRAA service centre for assistance. Never open or modify the appliance yourself.

DO'S & DON'TS

DO'S	DON'TS
Use a 230V AC power supply with a dedicated 16 Amp socket.	Do not touch the glass surface immediately after cooking, as it may remain hot.
Use only infrared-compatible cookware with a flat and smooth bottom for even heating.	Do not operate without cookware placed on the heating area.
Ensure cookware has a flat bottom (12–22 cm diameter).	Do not leave the cooktop unattended while it is in use.
Place the cooktop on a flat, stable, heat-resistant surface.	Do not block ventilation openings.
Keep air inlet and outlet vents clear and unblocked.	Do not immerse the unit, cord, or plug in water.
Center the cookware properly on the heating zone.	Do not use damaged power cords or loose sockets.
Allow the cooling fan to stop before unplugging.	Do not heat sealed containers (To avoid risk of explosion).
Clean the surface with a soft cloth and mild cleaner after cooling.	Do not place metal objects (spoons, knives, lids) on the cooktop.
Unplug the appliance when not in use.	Do not use cookware with a severely uneven, damaged, or rough bottom.
Keep the appliance away from children during operation.	Do not use extension cords with low current rating.
Keep the glass surface clean and dry before use. Allow the cooktop to cool completely before cleaning.	Do not place plastic, paper, cloth, or other flammable materials on or near the Curaa Infrared cooktop.

CARE & MAINTAINANCE

- 1 DO NOT** use acidic or alkaline cleaning agents on the appliance cover. Use a neutral cleaner and wipe the surface with a lukewarm cloth after cleaning.
- 2 DO NOT** immerse the appliance directly in water.
- 3** Regular cleaning and maintenance will help ensure the longevity and optimal performance of your cooktop.

Before Cleaning: Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.

Glass Surface: Wipe the glass surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for glass cooktops. Rinse with a clean, damp cloth and dry thoroughly.



Control Knob: Wipe the control panel with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

Exterior: Clean the exterior housing with a soft, damp cloth.

Vents: Ensure that the air intake and exhaust vents are free from dust and debris. Use a soft brush or vacuum cleaner to gently clear any blockages.

Storage: When not in use for extended periods, store the cooktop in a dry, safe place, away from direct sunlight and moisture.

Insect Protection: The cooktop features insect protection. However, regular cleaning helps maintain the effectiveness of this feature.

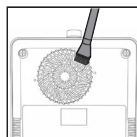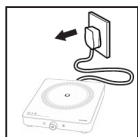

PRODUCT REGISTRATION

Please log onto **curaahome.com** and complete the online warranty form with your personal and product details within 14 days.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

Recycling:



Dispose of the device in an environmentally friendly manner. It should not be disposed of in the normal domestic waste. Dispose of it at a recycling centre for used electrical and electronic devices.



ONE (1) YEAR LIMITED WARRANTY

Dear Customer,

Thank you for choosing a **Cüraa** consumer product.

All Cüraa home products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Cüraa, we believe in providing not only service, but adding value to your kitchen. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

This Cüraa consumer product is covered against manufacturing defects from the date of purchase. The warranty is not transferable from one user/customer to another.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in Cüraa's sole discretion, will be repaired or replaced up to one (1) year from the original purchase date. In case of repairs or replacement of any part(s) of the product, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts (such as glass surface, printed markings, control panel buttons, power cord, or external body, etc.), which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at curaahome.com.
2. Any unit that has been tampered with or used for commercial purposes
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., Physical damage to the glass top (cracks or breakage), mishandling or improper operation, failure to keep the cooktop clean and vents free from food spills and debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by Cüraa. These defects include damages caused in the process of shipping, altering, or repairing the Cüraa product or any of its parts when the repair is performed by a repair person not authorized by Cüraa.
6. Products purchased, used, or operated outside India.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit **curaahome.com** for product care and maintenance self-help.

Our Customer Service

Specialists are also available at

Email: support@curaahome.com

Phone: +91 86554 78726, WhatsApp: +9179482 23620

to assist with product support and warranty service options.

To make a warranty claim, you must provide proof of purchase.

NOTES

[illegible]

For recipes follow this QR



@yfilhome

Sevenschef Consumers Home & Kitchen Private Ltd.

☎ **+91 86554 78726** 📞 **+91 79482 23620**

🌐 **www.curaahome.com**

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.