

cüraa

Retro Electric Kettle

O W N E R ' S G U I D E

Elevating Life

THANK YOU FOR PURCHASING
Retro Electric Kettle



**SCAN THE QR CODE TO
REGISTER YOUR PURCHASE**

-  curaahome.com
-  +91 86554 78726
-  +91 79482 23620

RECORD THIS INFORMATION

Serial Number: _____
Date of Purchase: _____
(Keep receipt)
Online Site: _____

TECHNICAL SPECIFICATIONS

Voltage: 230V, AC, 50 Hz
Power: 2000W
Controller: Strix
Capacity: 1.8 Litre
Material: SS304
Base: 360 Cordless Base

**PLEASE READ CAREFULLY AND
KEEP FOR FUTURE REFERENCE.**

CONTENTS

Important Safeguards4

Getting to Know Your Retro Kettle 6
Parts..... 6

How to Operate your Retro Kettle.....7
Before First Use..... 7
Operating Instructions..... 7

Care & Maintenance 8

Troubleshooting Guide..... 9

Replacement Parts..... 10

Product Registration..... 10

Warranty.....11

IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY • READ ALL INSTRUCTIONS BEFORE USE

⚠ WARNING

Before using the appliance, carefully read this manual. You must keep this manual, and, if possible, a cardboard box and internal packaging.

⚠ CAUTION

To avoid risk of electric shock, never immerse the cord, plug, or kettle base in water or other liquids.

- 1 Before connecting the kettle to the power supply, check the voltage indicated on the device corresponds to the voltage in your house.
- 2 **DO NOT** let the cord hang over the edge of the table or counter, or touch hot surfaces.
- 3 **DO NOT** place on or near a gas or electric burner, or in a heated oven.
- 4 **DO NOT** use the device when it is empty to avoid damage to the heating elements.
- 5 Make sure the kettle is used on a stable, flat surface out of the reach of children. This will avoid tipping over the kettle, as well as damage or injury.
- 6 To protect against fire, electric shock, shock the body, do not immerse cord, plugs or electric kettle in water or other liquids.
- 7 While boiling water or after it has boiled **AVOID** contact with steam coming from the outlet of the kettle.
- 8 **ALWAYS** pour out boiling water slowly and carefully without tipping the kettle too fast.
- 9 Be careful when re-filling the kettle when it is still hot.

10 The device can be operated by children aged 8 years and older, if they remain under supervision or have been instructed how to use the device in a safe manner, and understand the dangers resulting from improper use. Cleaning and maintenance can not be performed by children, unless they are over 8 years and are supervised. Keep the device and its cord out of sight of children under 8 years of age.

11 Children should not play with the appliance.

12 **DO NOT** touch the hot surface. Use the handle or button.

13 The attached base can be used only for purposes consistent with the intended purpose.

14 Pay close attention when moving a device containing hot water.

15 The kettle is only for domestic use. **DO NOT** use it outside.

16 The use of accessories that are not recommended by the manufacturer may result in fire, electric shock or injury.

17 Disconnect the kettle from the wall outlet when it is not in use, and before cleaning. Let the kettle cool before applying or removing parts, and before cleaning the device.

18 To disconnect the device, turn it off by setting the switch to the 'O' position, then remove the plug from the socket.

19 If the power cord is damaged, it must be replaced by a qualified person in order to avoid a hazard.

20 If the room temperature falls below 0 degrees Celsius, do not leave the kettle continuously connected to power, as this could affect the automatic reset temperature controller (heating element).

21 **DO NOT** use the device for purposes other than intended use.

22 The kettle can only be used with attached base.

23 If there is too much water in the kettle, the boiling water may spill.

24 **ALWAYS** make sure the lid is closed and do not lift it while the water is boiling, as removing the lid during this time may cause burns.


NOTE: DO NOT remove the lid when the water boils. The cover should be placed so that the steam was headed off the handle.

This device is intended for home use as well as for similar applications, such as:

- In kitchens reserved for employees in shops, offices, and other workplaces;
- Residential homes;
- By guests in hotels, motels, and other similar accommodation facilities;
- Bed & breakfast establishments.

SAVE THESE INSTRUCTIONS

GETTING TO KNOW YOUR RETRO KETTLE

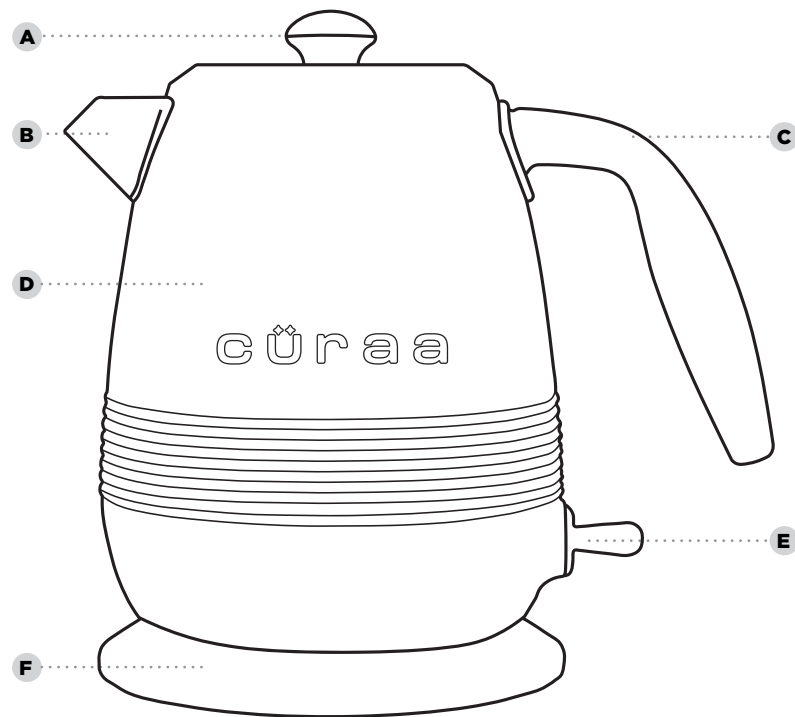

PARTS

- A Lid
- B Spout
- C Handle
- D Main Body
- E Switch
- F Base

Images Just for Reference Only

HOW TO OPERATE YOUR RETRO KETTLE

BEFORE FIRST USE

IMPORTANT: Review all warnings on pages 4-5 before proceeding.

NOTE: Remove all packaging materials and any promotional labels or stickers from the Retro Kettle.

NOTE: Clean each part thoroughly, the removable parts should be washed by hand in warm water. The base can be cleaned with a Clean Soft damp cloth.

DO NOT PUT IN A DISHWASHER.

- 1 The high-quality temperature controller ensures the water boils completely, and the plastic materials used are safe for contact with food
- 2 Built-in protection and more precise temperature controllers for safer and longer service life of the device.
- 3 Cordless Kettle and swivel base 360 provides ease of use.
- 4 Hidden heating element, high thermal power, long life, easy to clean.
- 5 The sleek body of the stainless steel kettle provides a beautiful appearance, the material is durable beneficial for health.
- 6 Fast heating: water boils after 5 to 8 minutes of filling the kettle.
- 7 The indicator light indicates auto shut-off of the kettle after boiling water.

OPERATING INSTRUCTIONS

- 1 Open the kettle, pour in the water and close the lid. In order to avoid burns wait a moment after boiling. Water should not be below the minimum level indication or above the maximum level indication.
- 2 Insert the plug into the socket, set the kettle on the base and turn the unit on with the switch. Remember, do not turn the kettle on before placing it on the base.
- 3 After boiling the kettle shuts off automatically.
- 4 Before pouring water from the kettle, wait until the water stops boiling.
- 5 If the kettle switches off automatically before the water boils, it means there is excess buildup inside the kettle that needs to be removed. Fill the kettle with water up to the maximum level, then empty after boiling. Repeat this step and clean the kettle to remove the resulting odor.

CARE & MAINTAINANCE

Cleaning:

- 1 Before cleaning, please disconnect the unit from the power supply by removing the plug from the socket and allow the appliance to cool down.
- 2 **DO NOT** immerse the kettle, power cord, plug or outlet in water.
- 3 Ensure that the electronic circuit wire is dry.
- 4 Wipe the body of the kettle with a damp cloth.
DO NOT use scouring powder or cleaning agents, as they may damage the surface of the kettle.

Descaling:

- 1 Use a descaling product and follow the instructions provided for that product.
- 2 Pour 0.5 liters of 8% white vinegar into the kettle, leave it for an hour, then pour out the vinegar and rinse the kettle with clean water 4 to 5 times.
- 3 You can also pour 0.5 liters of water into the kettle, bring it to a boil, add 25 grams of citric acid, let it stand for 15 minutes, and then rinse 4 to 5 times with clean water.

Recycling:



Dispose of the device in an environmentally friendly manner. It should not be disposed of in the normal domestic waste. Dispose of it at a recycling centre for used electrical and electronic devices.

TROUBLESHOOTING GUIDE

If the device stops working properly, first check whether you are capable of troubleshooting the problem. If you can not, contact customer service.

PROBLEMS	POSSIBLE CAUSE	SOLUTIONS
Kettle doesn't turn on	Power outlet issue	Check if the outlet works by plugging in another device.
	Faulty power cord	Inspect the cord for damage and replace if necessary.
	Malfunctioning switch	Check the switch for loose connections or replace it.
Kettle doesn't heat water	Faulty thermostat	Test and replace the thermostat if needed.
	Limescale buildup	Descale the kettle using vinegar or a descaling agent.
Kettle turns off before boiling	Thermostat sensitivity issue	Adjust or replace the thermostat.
	Limescale or mineral deposits	Clean the kettle thoroughly.
Kettle doesn't turn off	Faulty auto shut-off sensor	Replace the auto shut-off sensor.
	Steam vent blocked	Clear any blockages in the steam vent.
Leakage in kettle	Cracked body or spout	Seal the crack or replace the kettle if severe.
	Loose or damaged base	Tighten screws or replace the base.
Unusual noise or smell	Residual manufacturing oil or debris	Boil water several times to clear odors.
	Overheating due to lack of water	Ensure water level is sufficient.
Kettle light doesn't work	Burnt-out indicator bulb	Replace the bulb if replaceable.
	Faulty wiring	Inspect and repair internal wiring.

REPLACEMENT PARTS

To order additional parts and attachments, visit curaahome.com

PRODUCT REGISTRATION

Please log onto curaahome.com and complete the online warranty form with your personal and product details within 14 days.

The registration will enable us to contact you in the unlikely event of a product safety notification. By registering, you acknowledge you have read and understood the instructions for use and warnings set forth in the accompanying instructions.

cūraa | Retro Kettle

TWO (2) YEAR LIMITED WARRANTY

Dear Customer,

Thank you for choosing a **Cūraa** consumer product.

All Cūraa home products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Cūraa, we believe in providing not only service, but adding value to your kitchen. The warranty has therefore been designed especially for you with your interest at heart.

Warranty Service

This Cūraa consumer product is covered against manufacturing defects from the date of purchase. The warranty is not transferable move it up as there is space.

What is covered by this warranty?

1. The original unit and/or non-wearable parts deemed defective, in Cūraa's sole discretion, will be repaired or replaced up to two (2) year from the original purchase date. In case of repairs or replacement of any part(s) of the product, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.

What is not covered by this warranty?

1. Normal wear and tear of wearable parts, which require regular maintenance and/or replacement to ensure the proper functioning of your unit, are not covered by this warranty. Replacement parts are available for purchase at curaahome.com.
2. Any unit that has been tampered with or used for commercial purposes.
3. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance (e.g., failure to keep the well of the base clear of food spills and other debris), or damage due to mishandling in transit.
4. Consequential and incidental damages.
5. Defects caused by repair persons not authorized by Cūraa. These defects include damages caused in the process of shipping, altering, or repairing the Cūraa product or any of its parts when the repair is performed by a repair person not authorized by Cūraa.
6. Products purchased, used, or operated outside India.

How to get service

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, visit curaahome.com for product care and maintenance self-help.

Our Customer Service

Specialists are also available at

Email: support@curaahome.com

Phone: +91 86554 78726, WhatsApp: +9179482 23620

to assist with product support and warranty service options.

To make a warranty claim, you must provide proof of purchase.

For recipes follow this QR



@yflhome

Sevenchef Consumers Home & Kitchen Private Ltd.

☎ **+91 86554 78726** 📞 **+91 79482 23620**

🌐 **www.curaahome.com**

Illustrations may differ from actual product. We are constantly striving to improve our products; therefore the specifications contained herein are subject to change without notice.